


**TEC**


**Technische WarenService GmbH**

# **Service-Unterlagen**

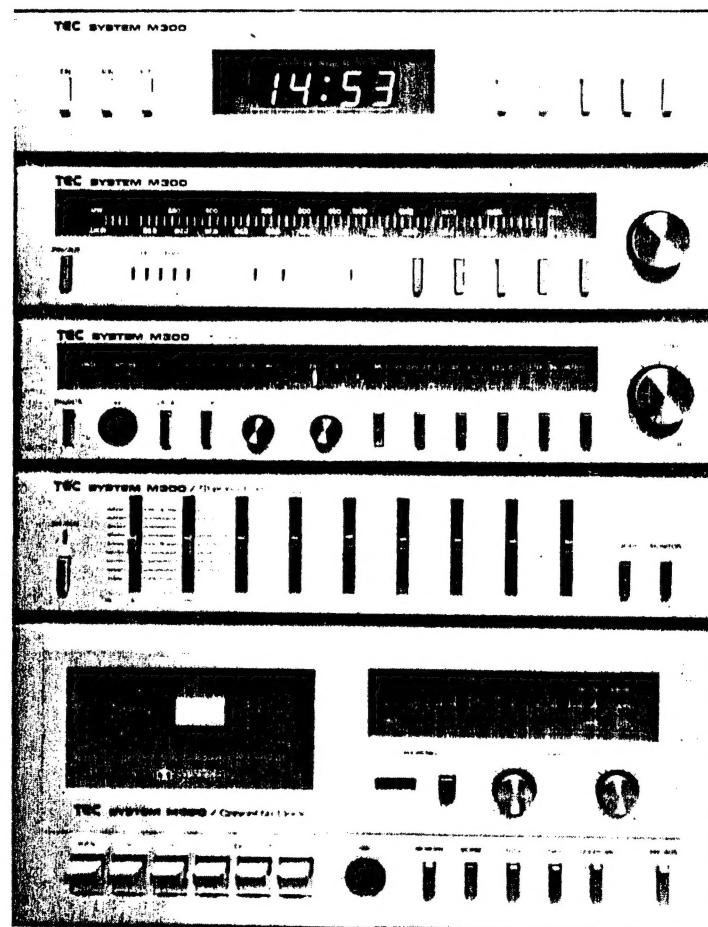


**TEC-System M 300**


**Geräte-Typen 29/56-60**

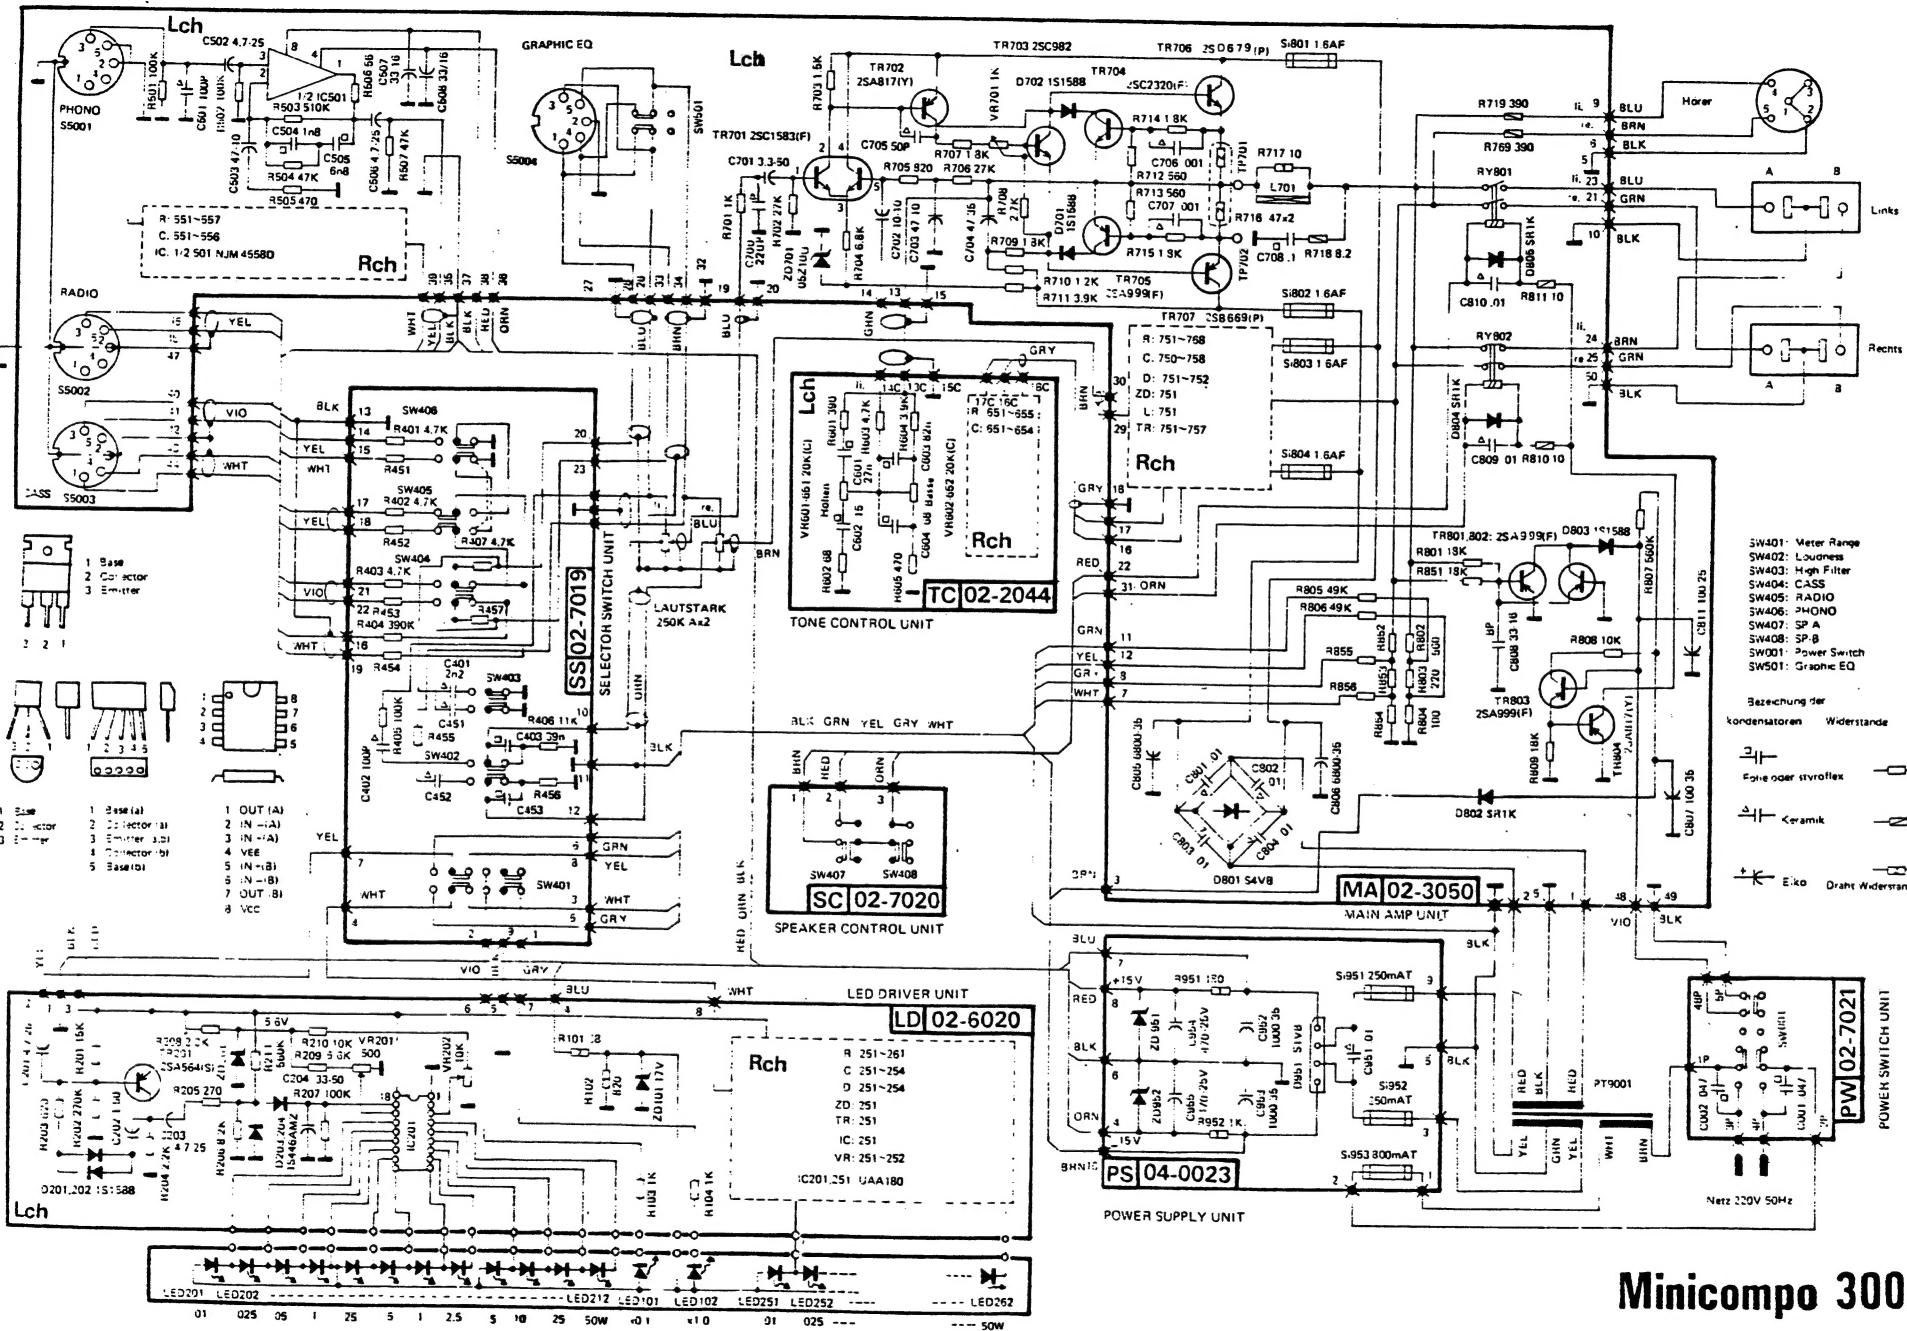


**72-1741**

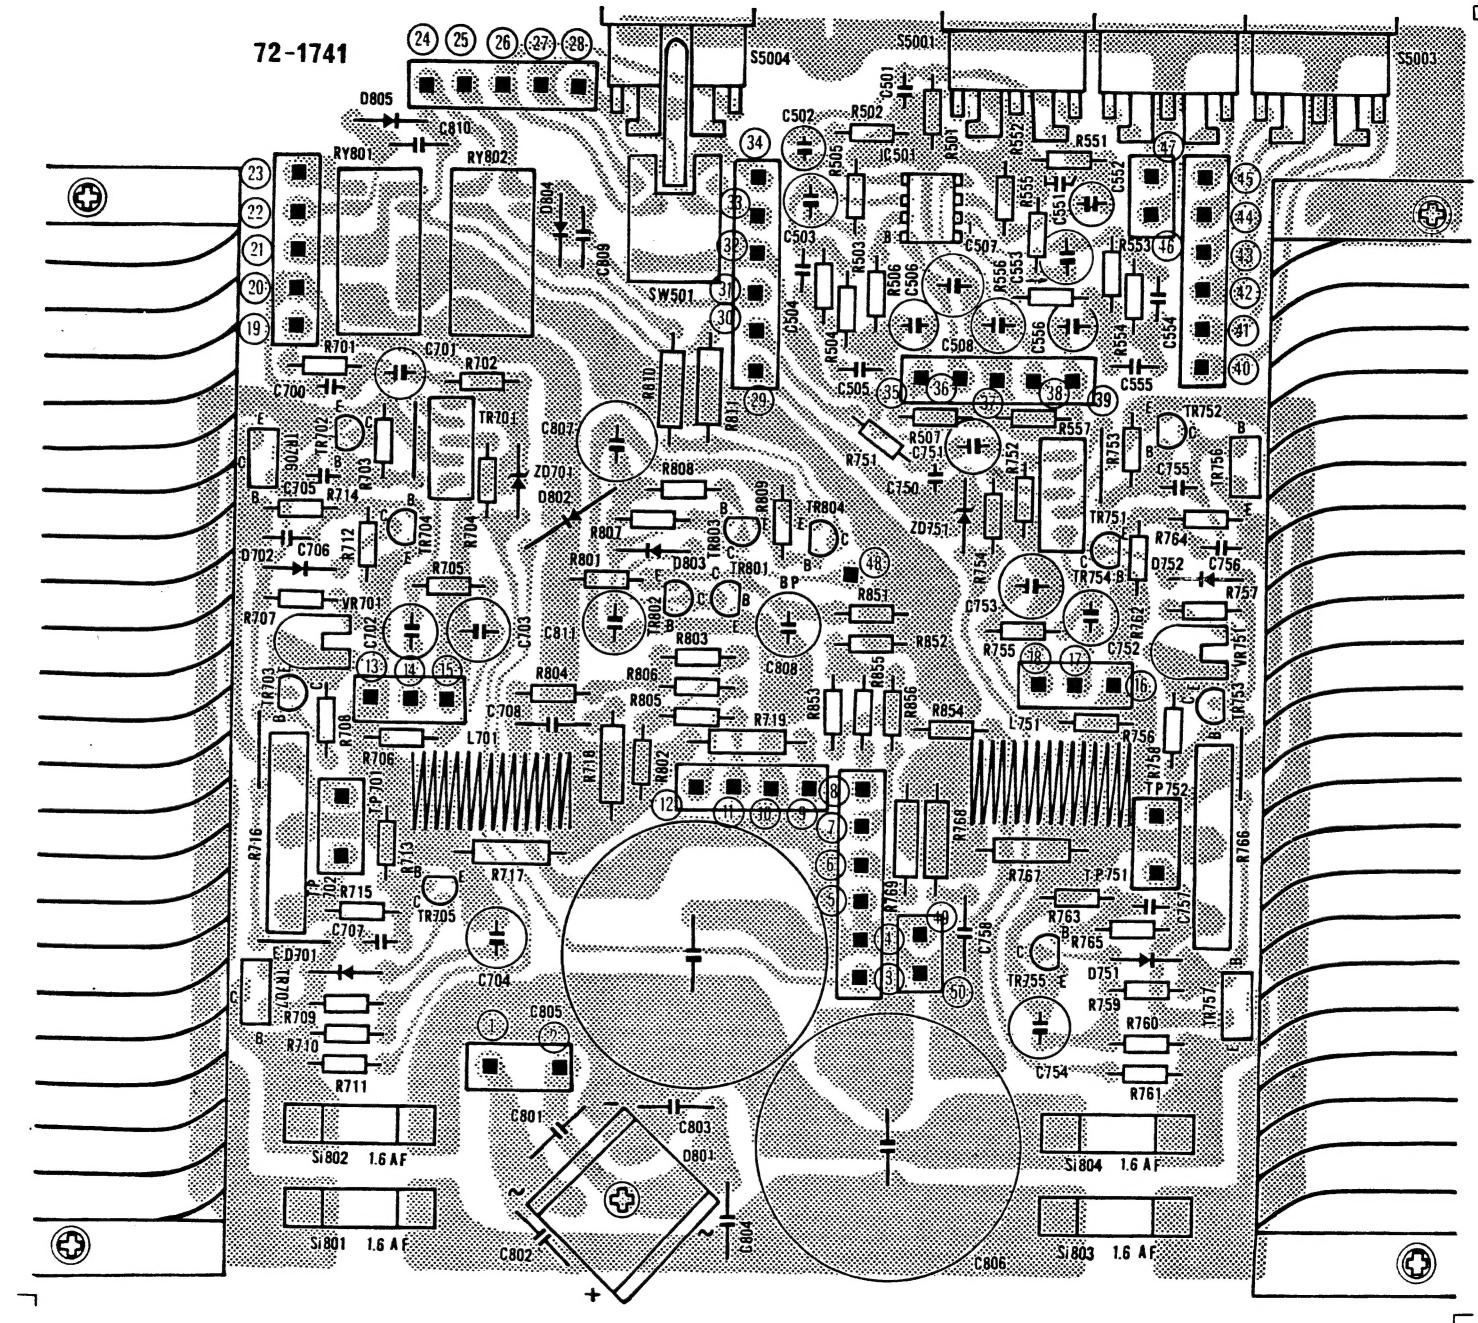


**COMPONENT LOCATION – MAIN AMP. UNIT (MA 02-3050)**

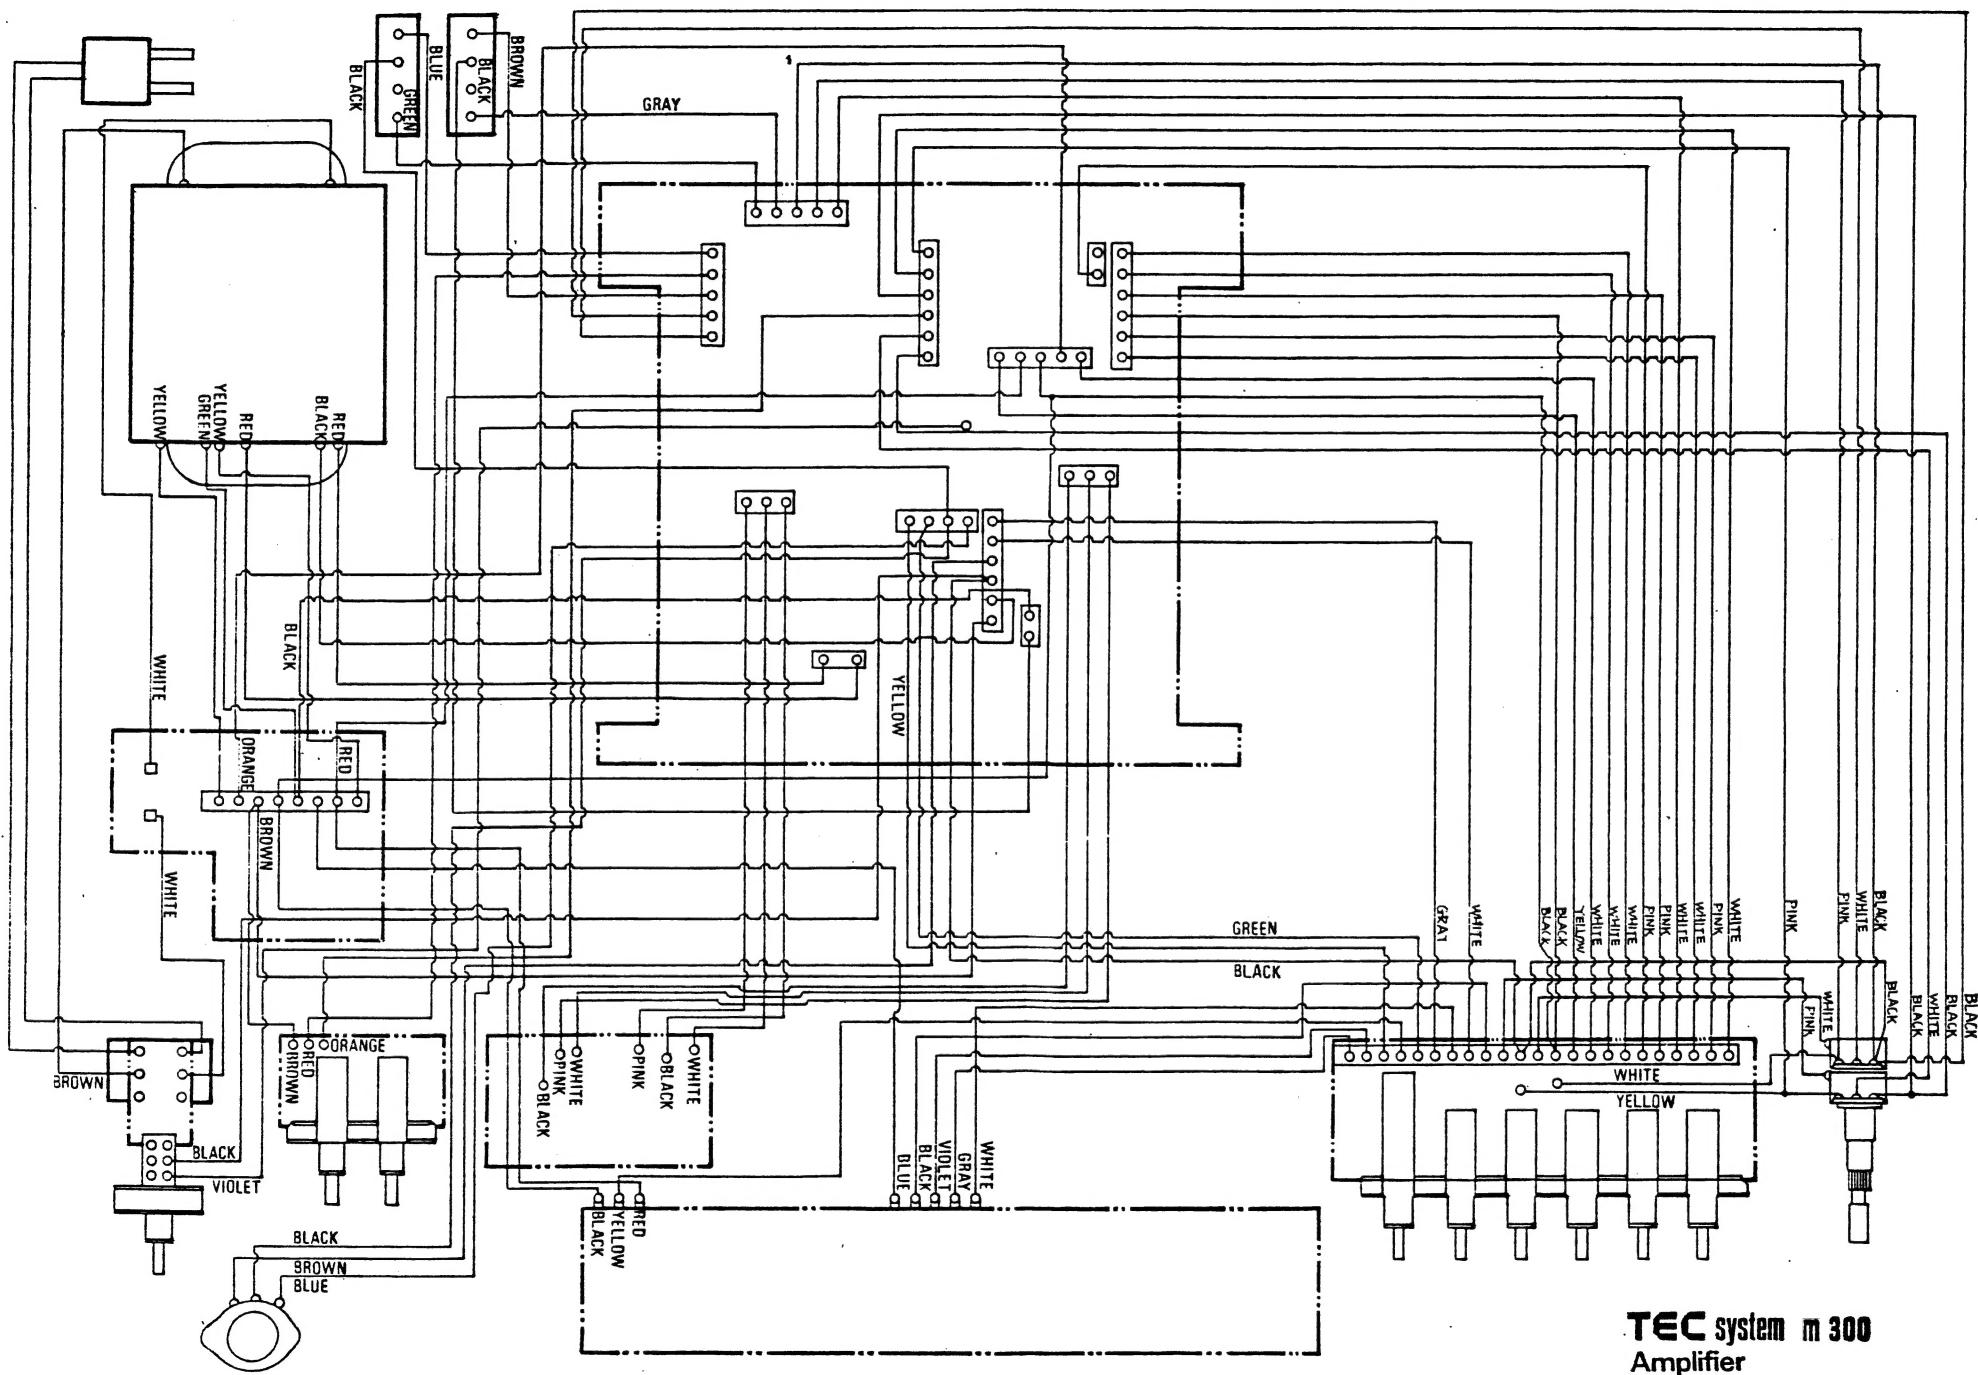


**TEC system m 300**  
**Amplifier**

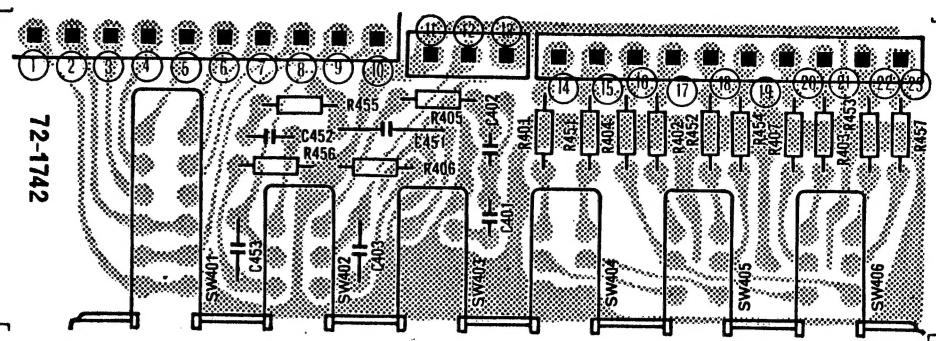


## **COMPONENT LOCATION – SELECTOR SWITCH UNIT (SS 02-7019)**

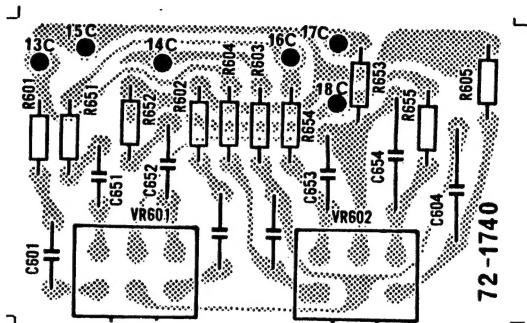


**COMPONENT LOCATION – TONE CONTROL UNIT (TC 02-2044)**

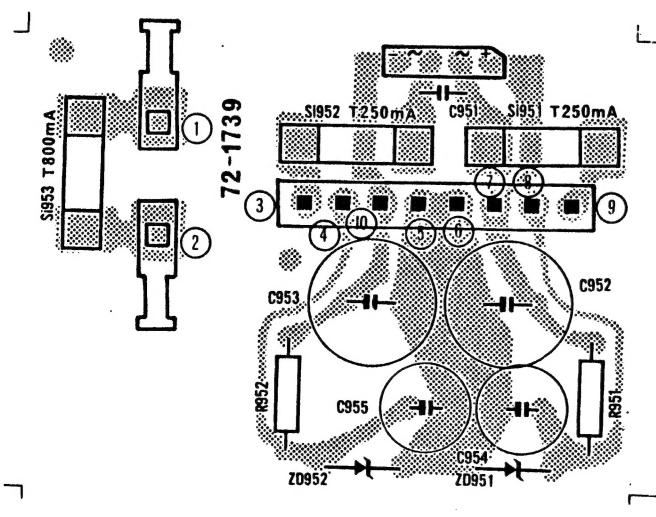


**COMPONENT LOCATION – POWER SUPPLY UNIT (PS 04-0023)**

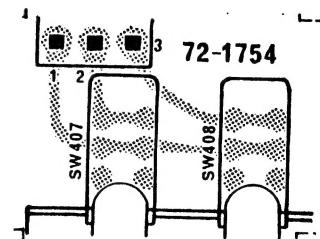


**COMPONENT LOCATION –  
SPEAKER CONTROL UNIT (SC 02-7020)**

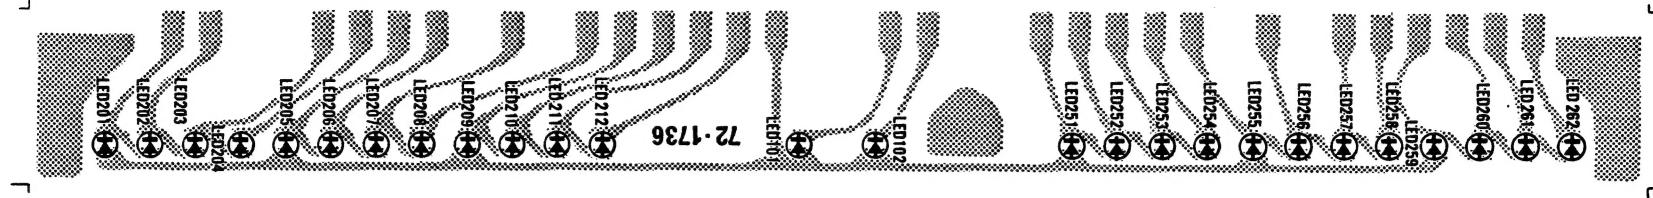


## **COMPONENT LOCATION – LED UNIT (LD 02-6020)**

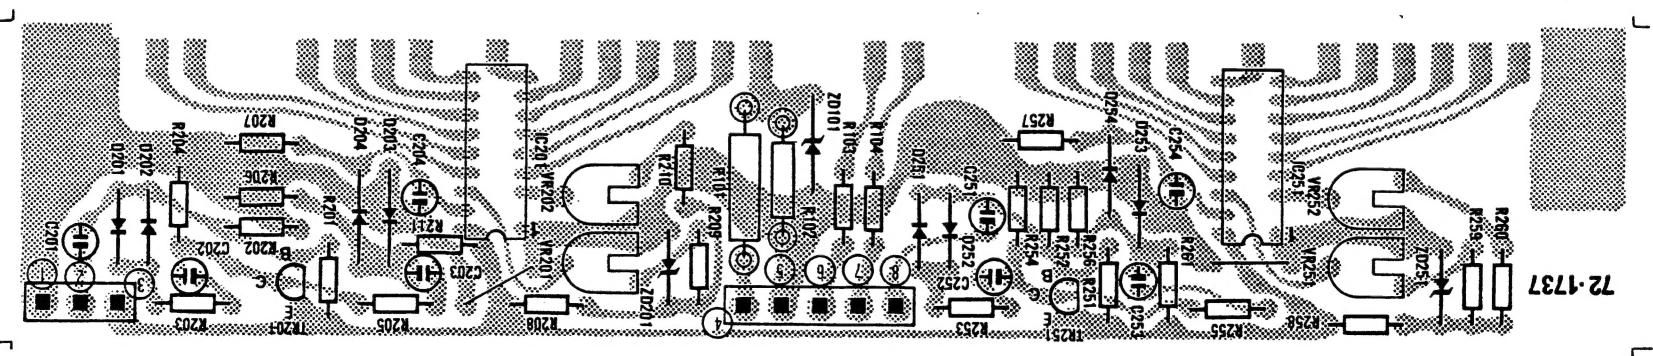


## **COMPONENT LOCATION – LED DRIVER UNIT (LD 02-6020)**

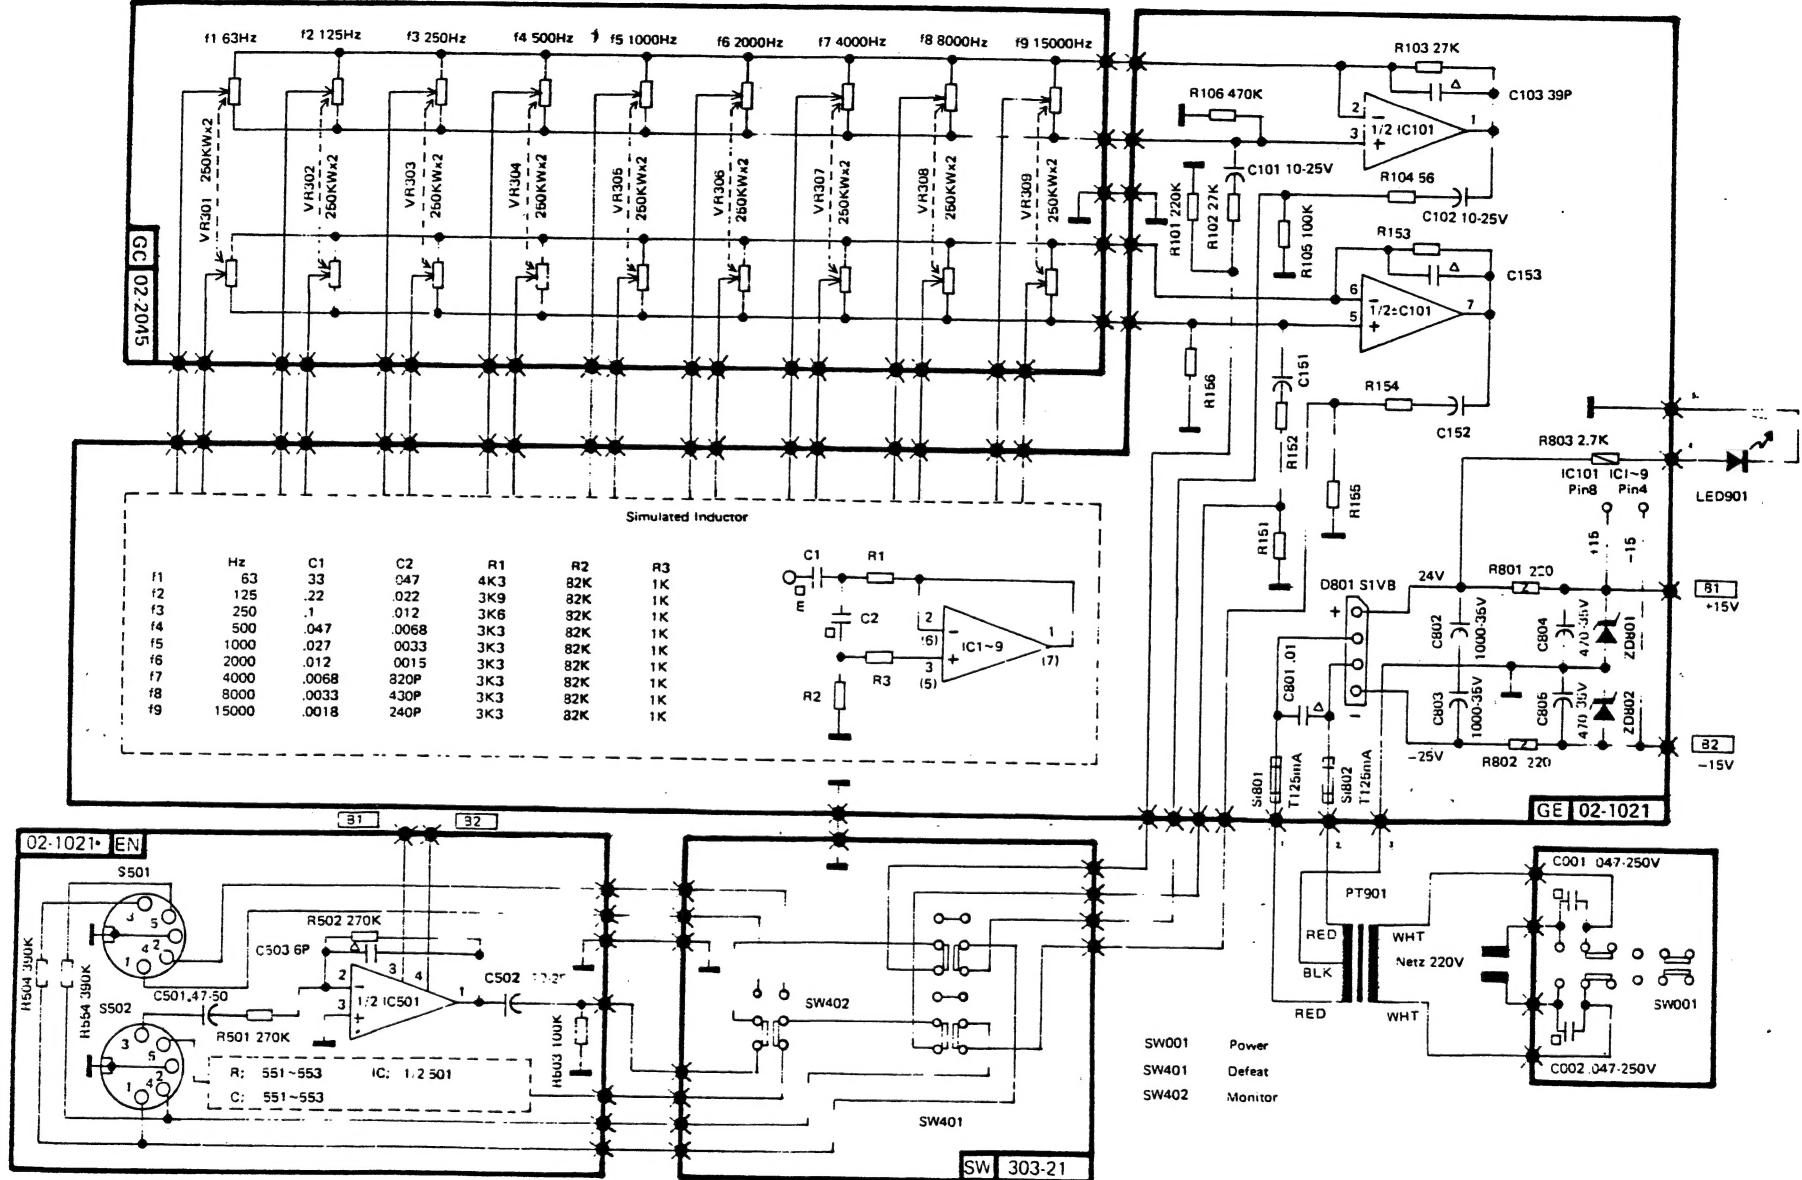


**Minicompo 300E**  
**01-3303**

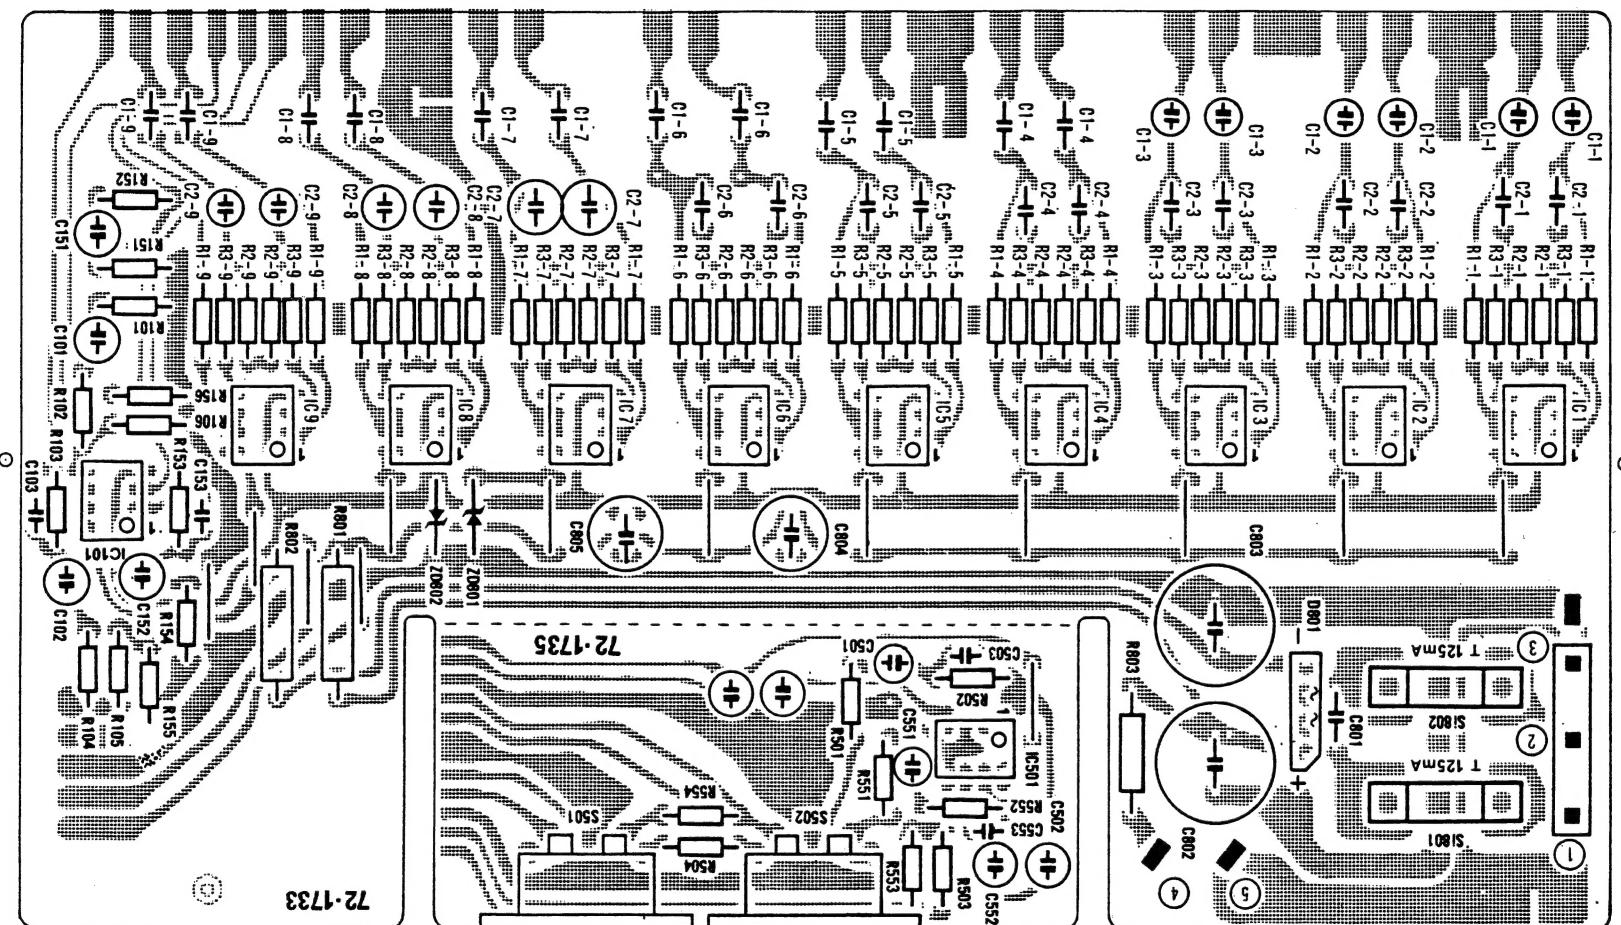


**COMPONENT LOCATION – EQ UNIT (GE,EN 02-1021)**

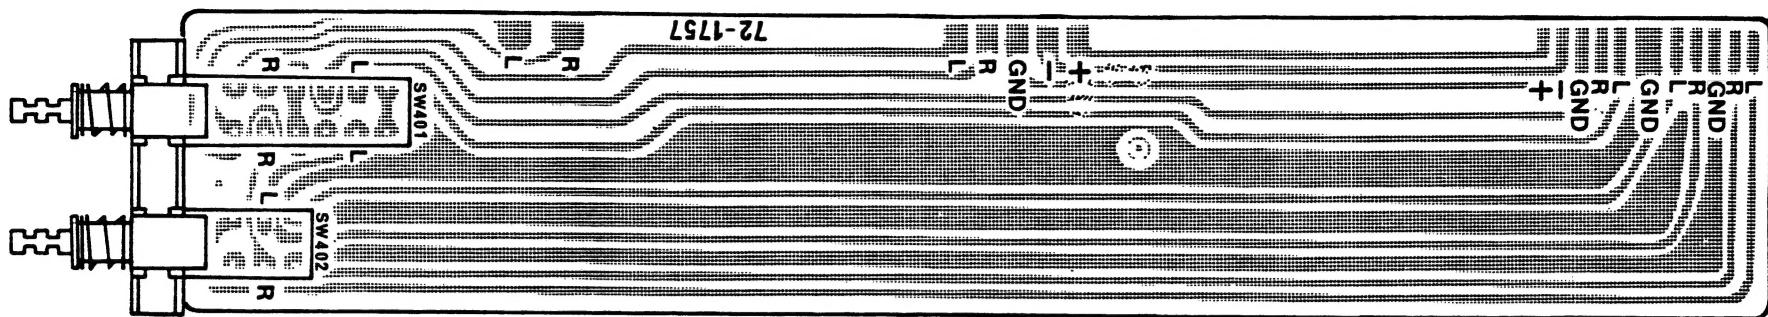


COMPONENT LOCATION SW WIRING UNIT (01-3303-21)

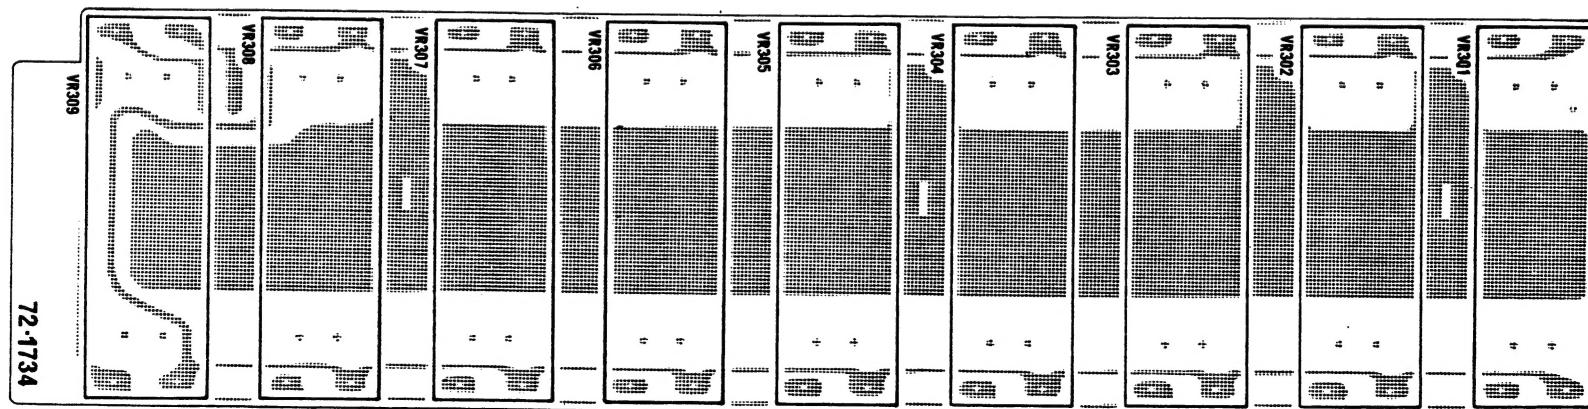

COMPONENT LOCATION - CONTROL UNIT (GC 02-2045)

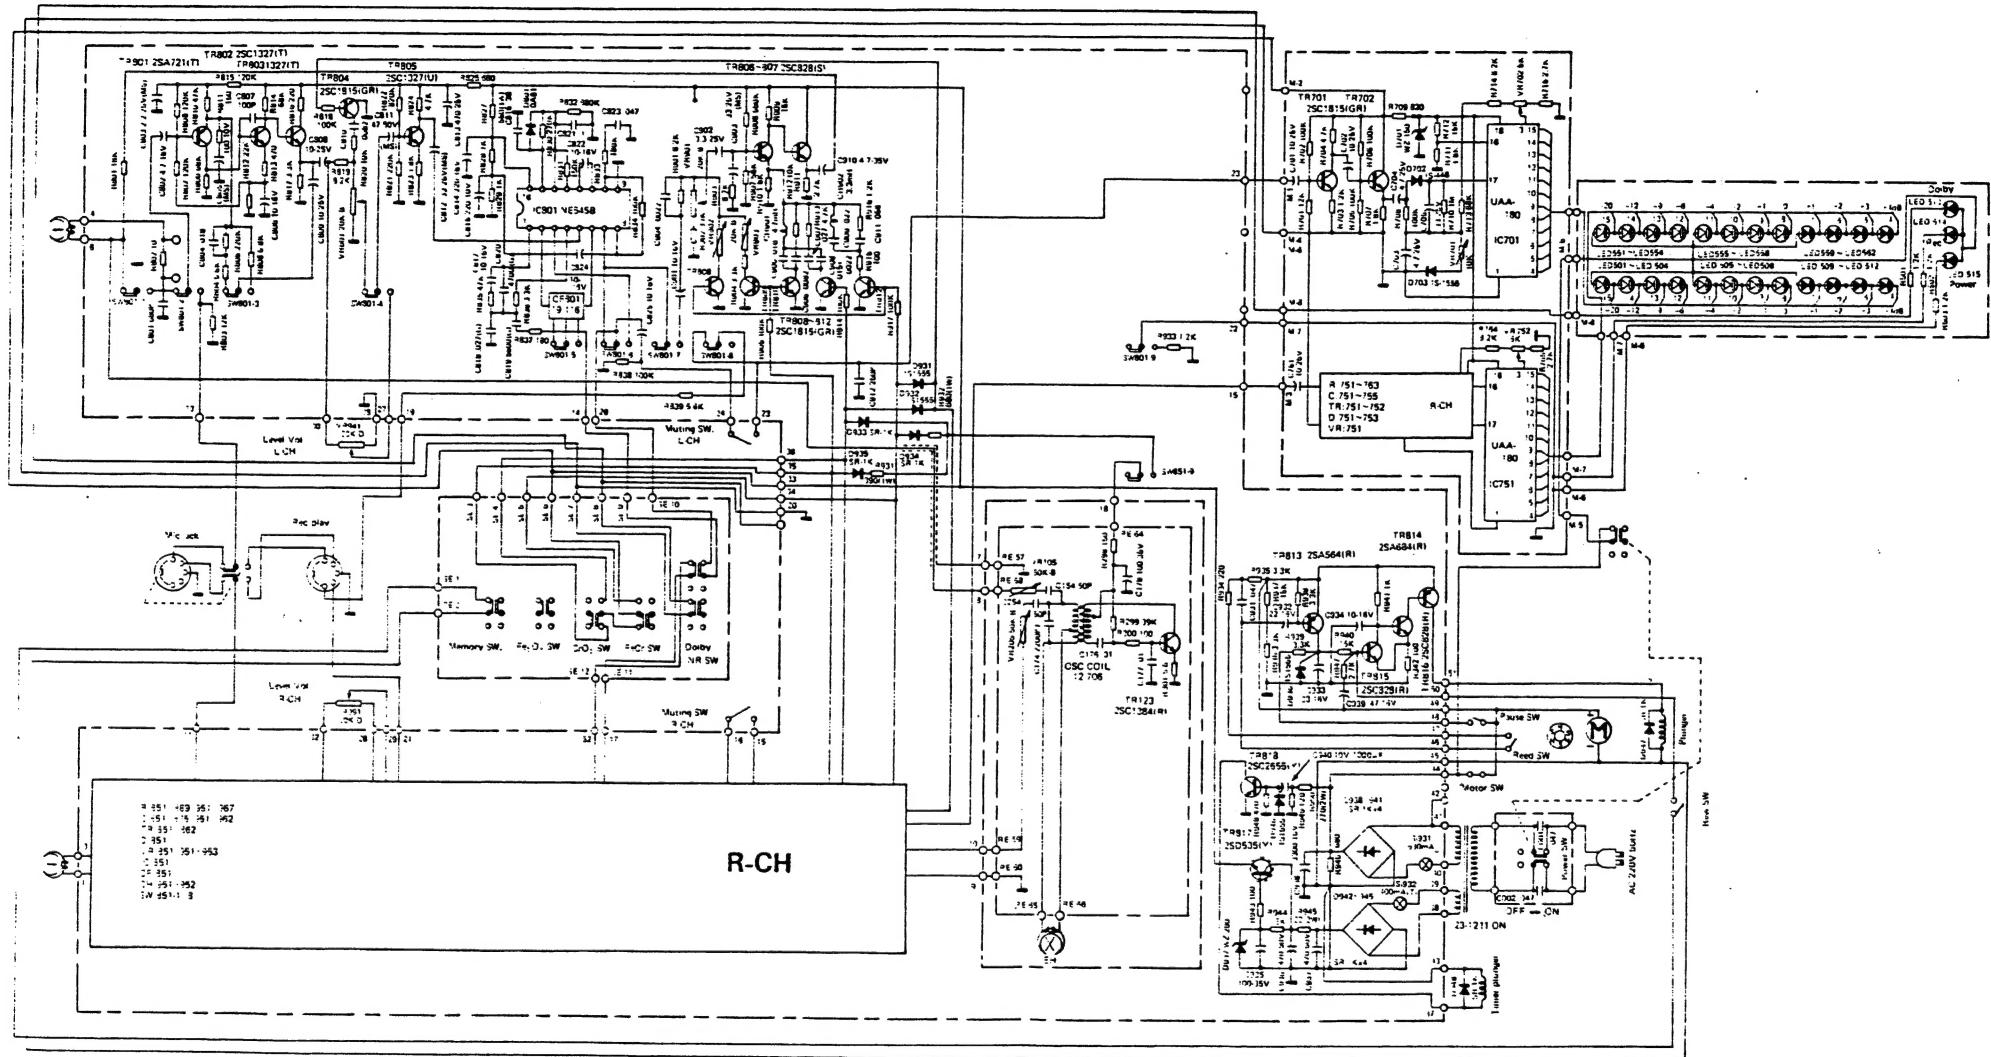



Mini 300 D  
01-3302

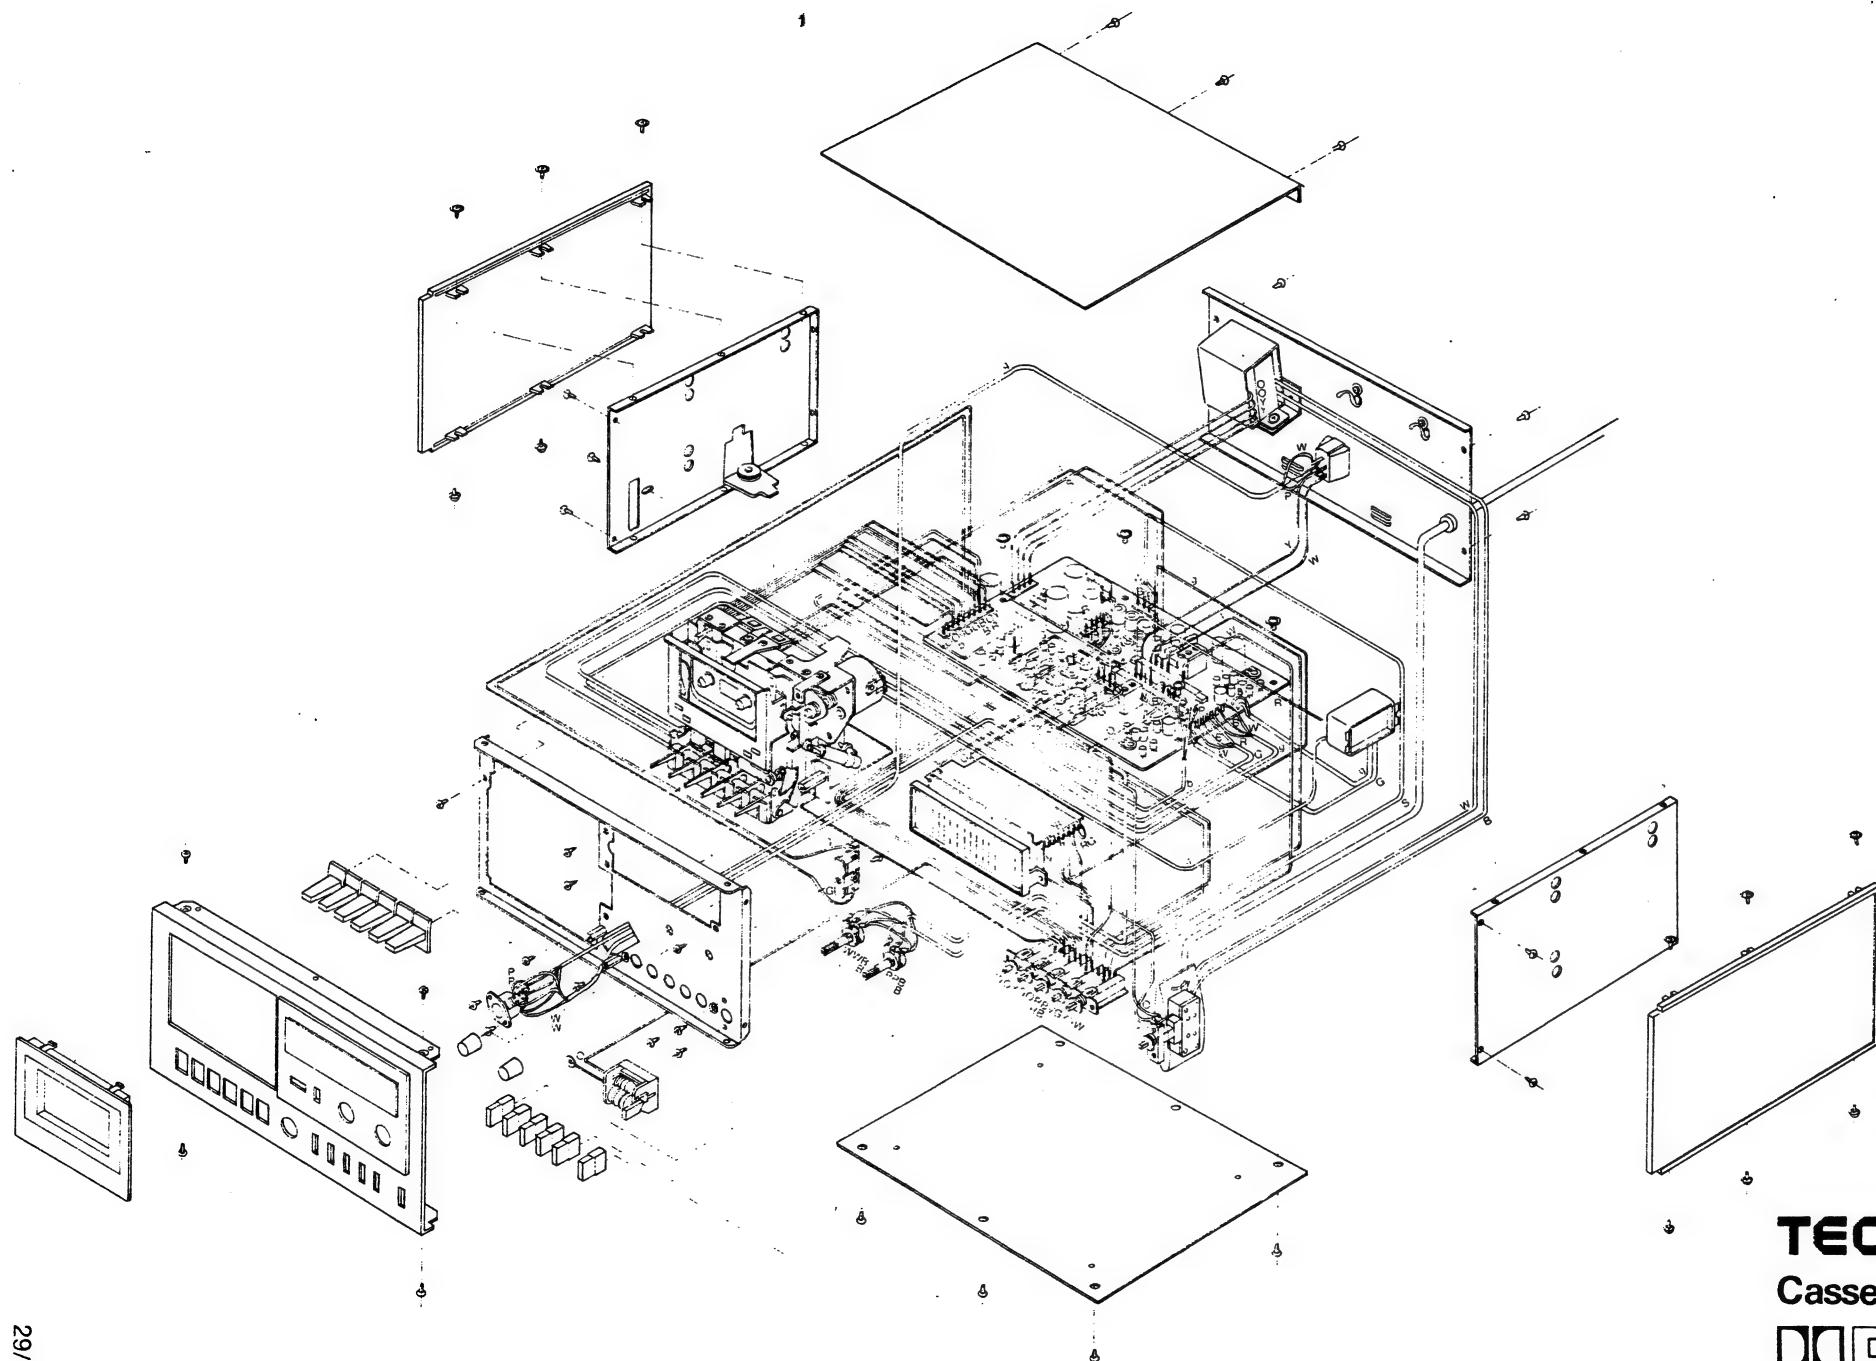


**TEC** system m 300  
Cassette Deck  
**DOLBY SYSTEM**®

# MODEL TN-57DX-37

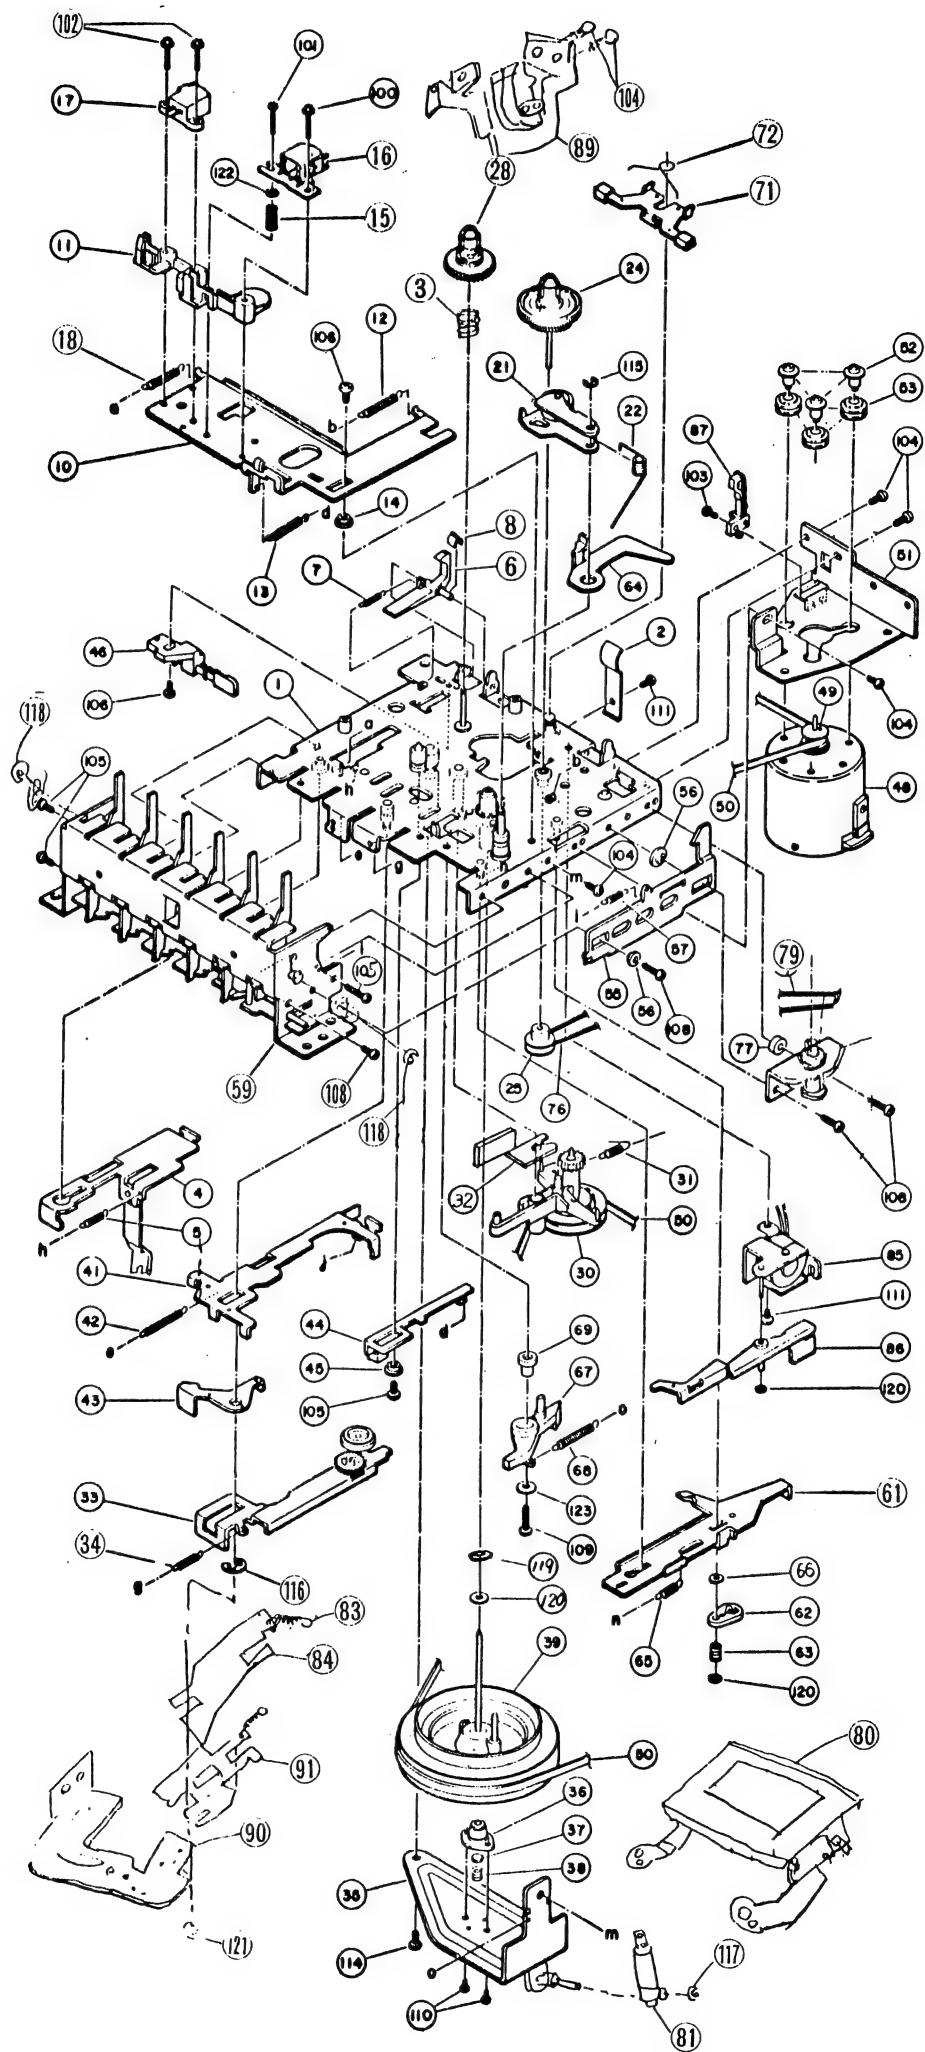


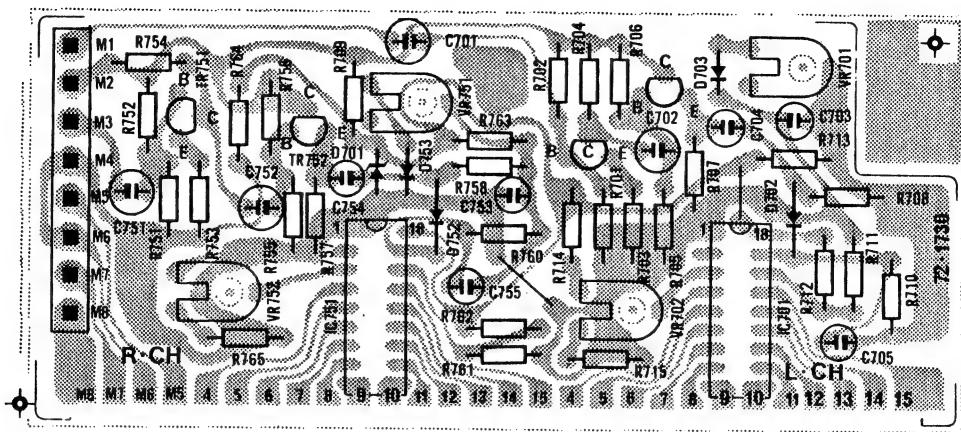


## **COMPONENT LOCATION – DIGITAL LEVEL METER UNIT (02-6018)**

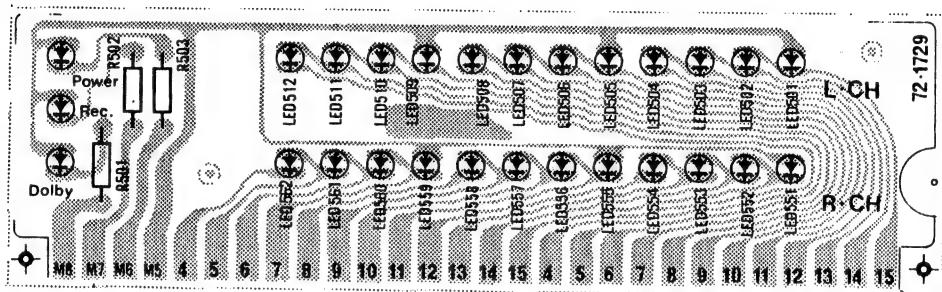

## **COMPONENT LOCATION – LED DISPLAY UNIT (02-6018)**

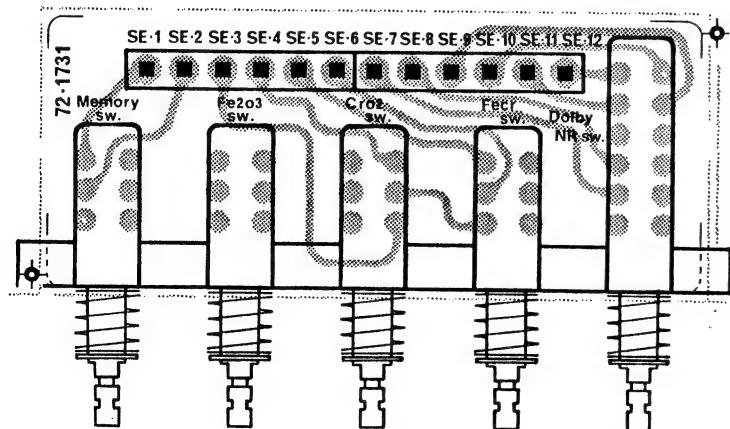


**COMPONENT LOCATION – SELECTOR UNIT (01-3302-21)**

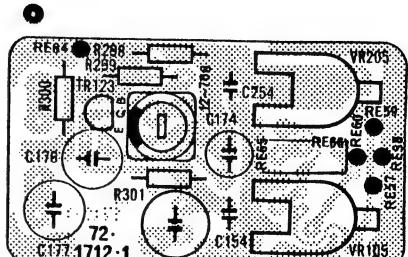

### **COMPONENT LOCATION**


**BIAS OSCILLATOR UNIT**  
**(02-6016)**

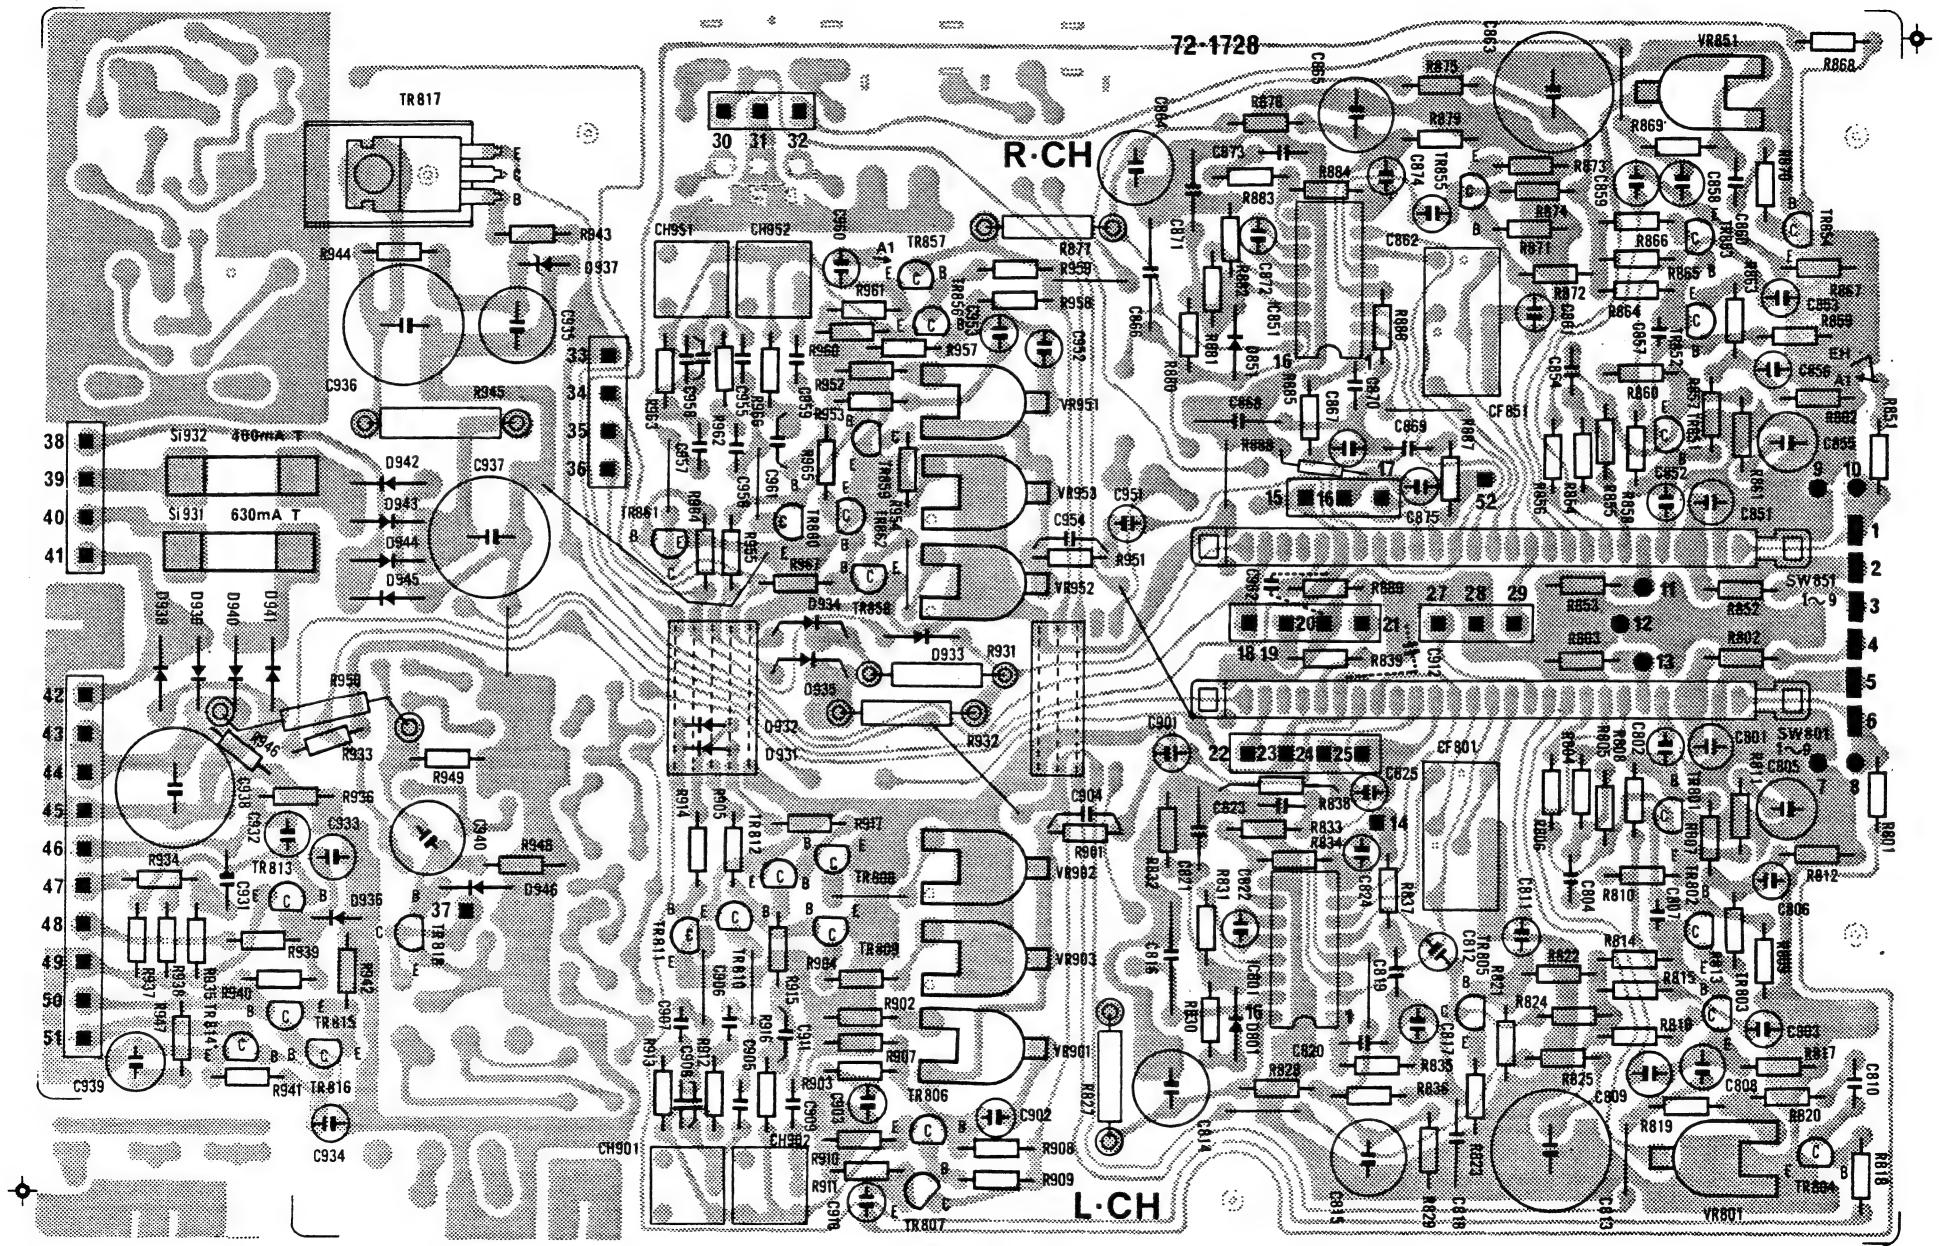


**COMPONENT LOCATION – RECORDING PLAYBACK AMP. UNIT (02-428)**


**IC101 TERMINAL ASSIGNMENTS**

PIN FUNCTION  
 1 AM OUT  
 2 10HRS B & C  
 3 HRS F  
 4 HRS G  
 5 HRS A  
 6 HRS B  
 7 HRS D  
 8 HRS C  
 9 HRS E  
 10 10MINS F  
 11 10MINS G  
 12 10MINS A & D  
 13 10MINS B  
 14 10MINS E  
 15 10MINS C  
 16 MINS F  
 17 MINS G  
 18 MINS A  
 19 MINS B  
 20 MINS E  
 21 SUB (-)  
 22 NC  
 23 MINS D  
 24 MINS C  
 25 OUTPUT COMMON SOURCE  
 26 SNOOZE INPUT  
 27 ALARM OUTPUT  
 28 ALARM OFF INPUT  
 29 SLEEP OUTPUT  
 30 VSS (-)  
 31 VDD (+)  
 32 SLEEP DISPLAY INPUT  
 33 ALARM DISPLAY INPUT  
 34 SECONDS DISPLAY INPUT  
 35 SLOW SET INPUT  
 36 FAST SET INPUT  
 37 50/60Hz CP INPUT  
 38 50/60Hz SELECT  
 39 BLANKING INPUT  
 40 12/24HR SELECT  
 41 1Hz OUTPUT  
 42 PM OUTPUT

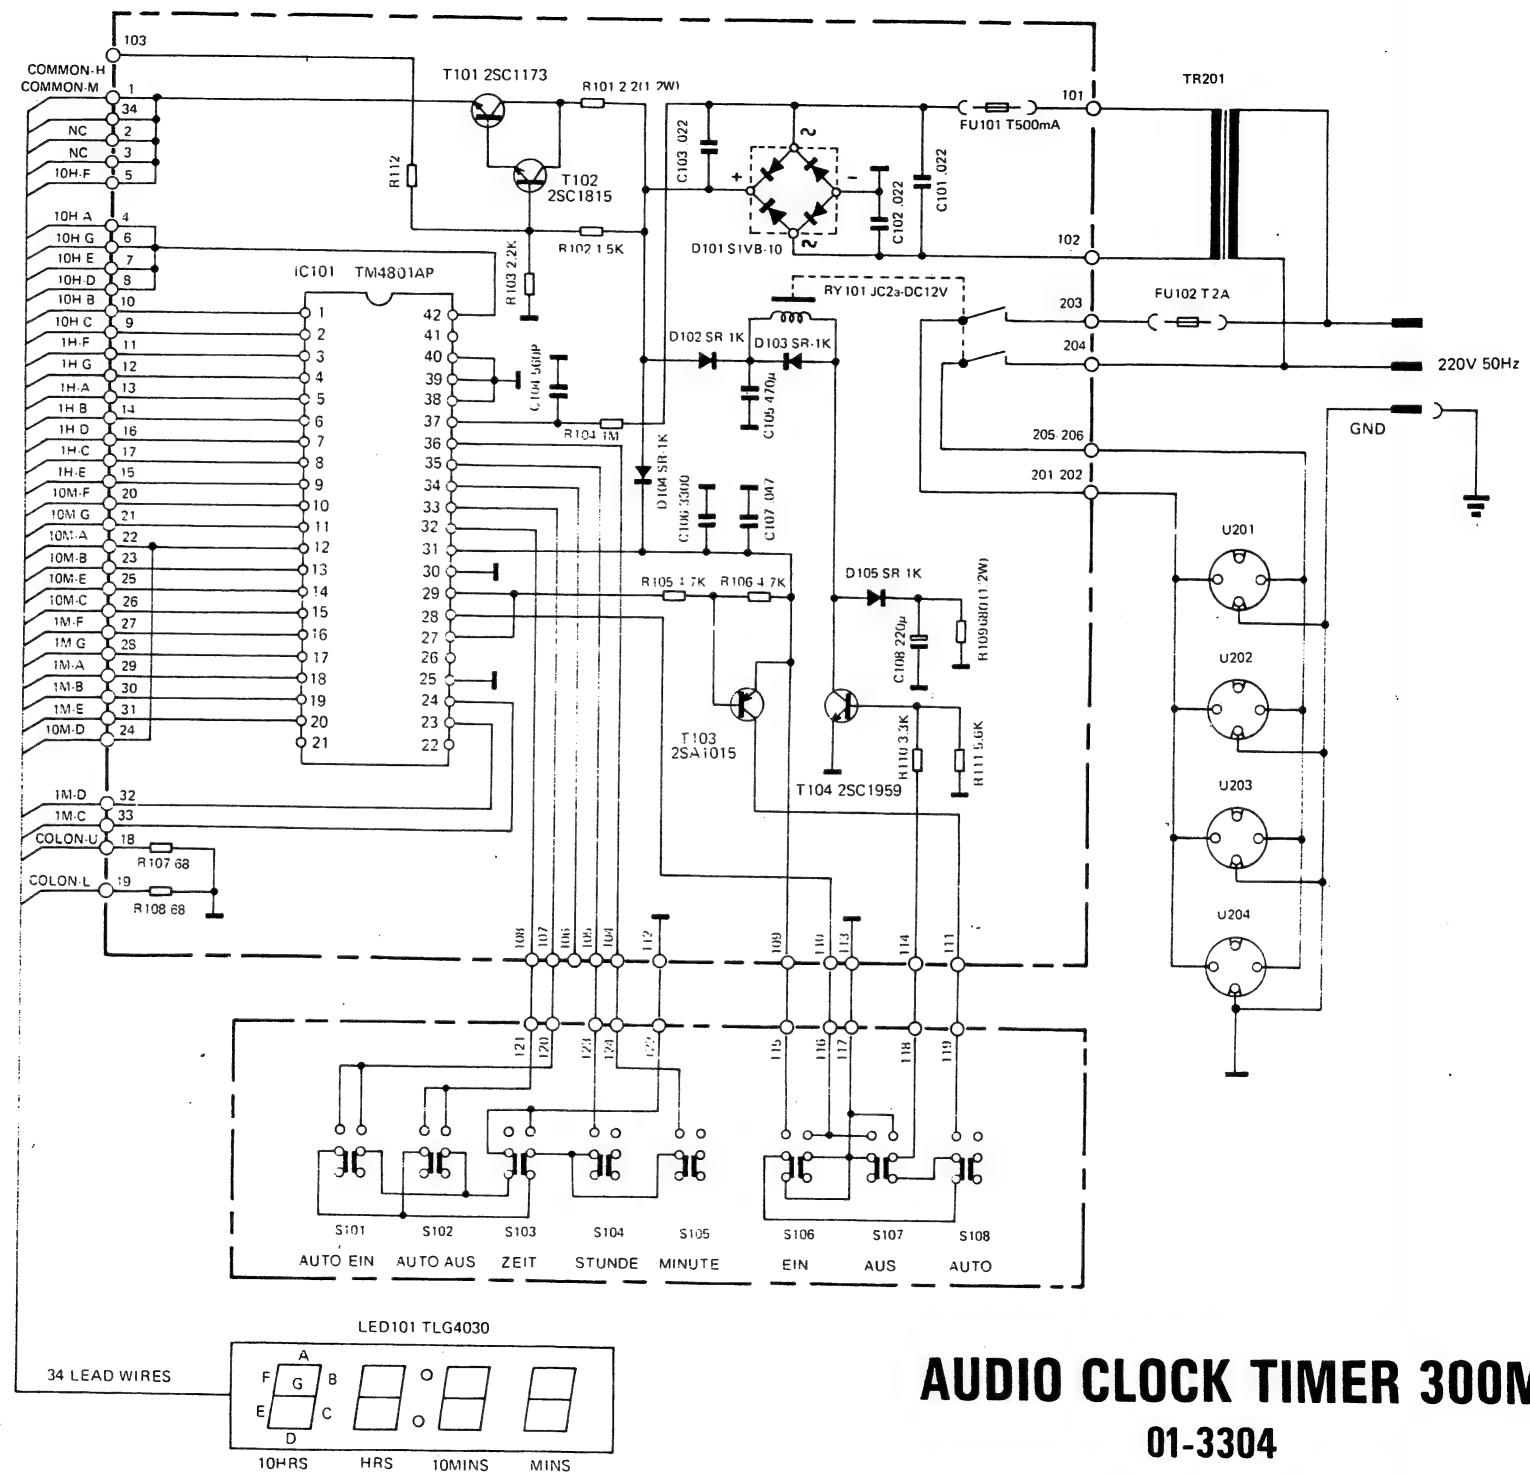


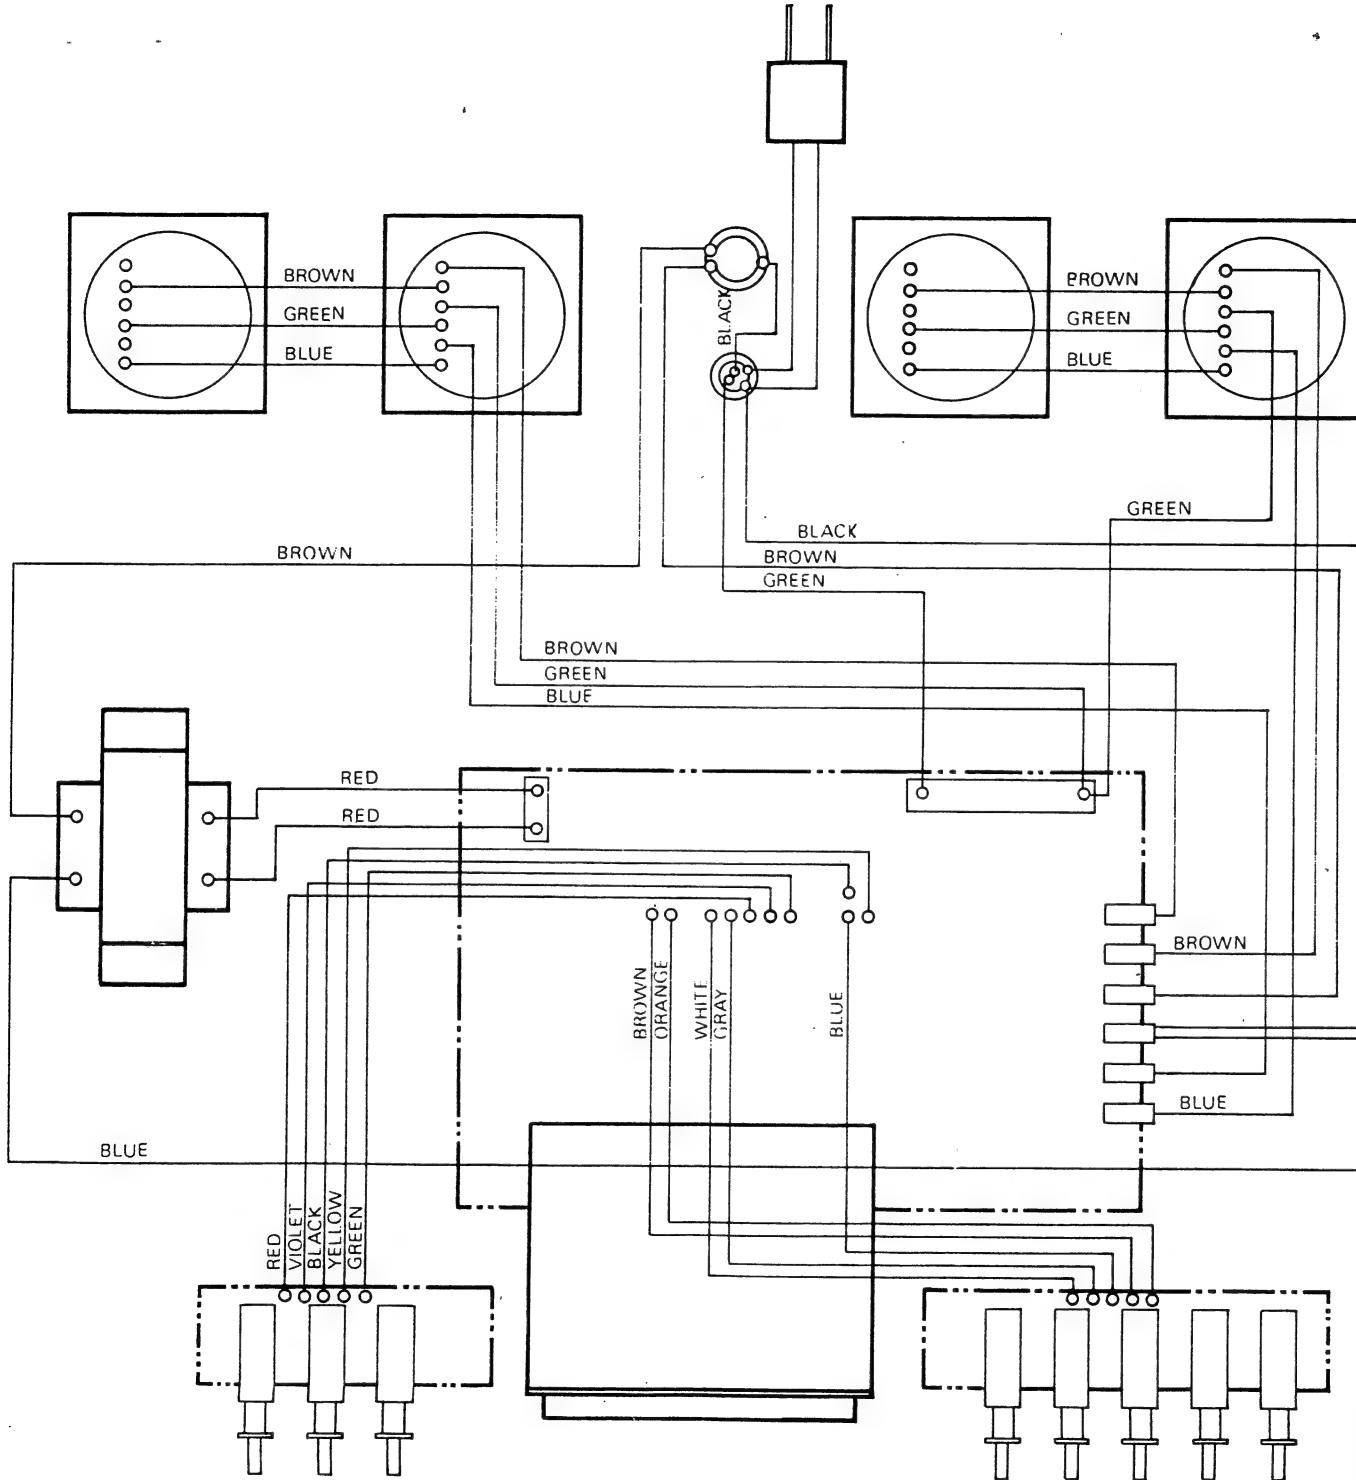


**TEC system m 300**  
Audio Clock Timer

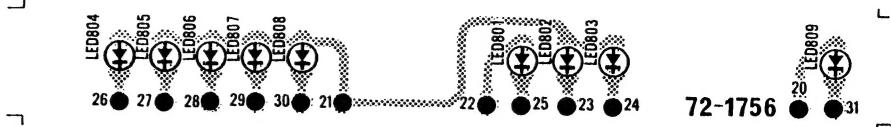


COMPONENT LOCATION – LED UNIT (01-3300-11)

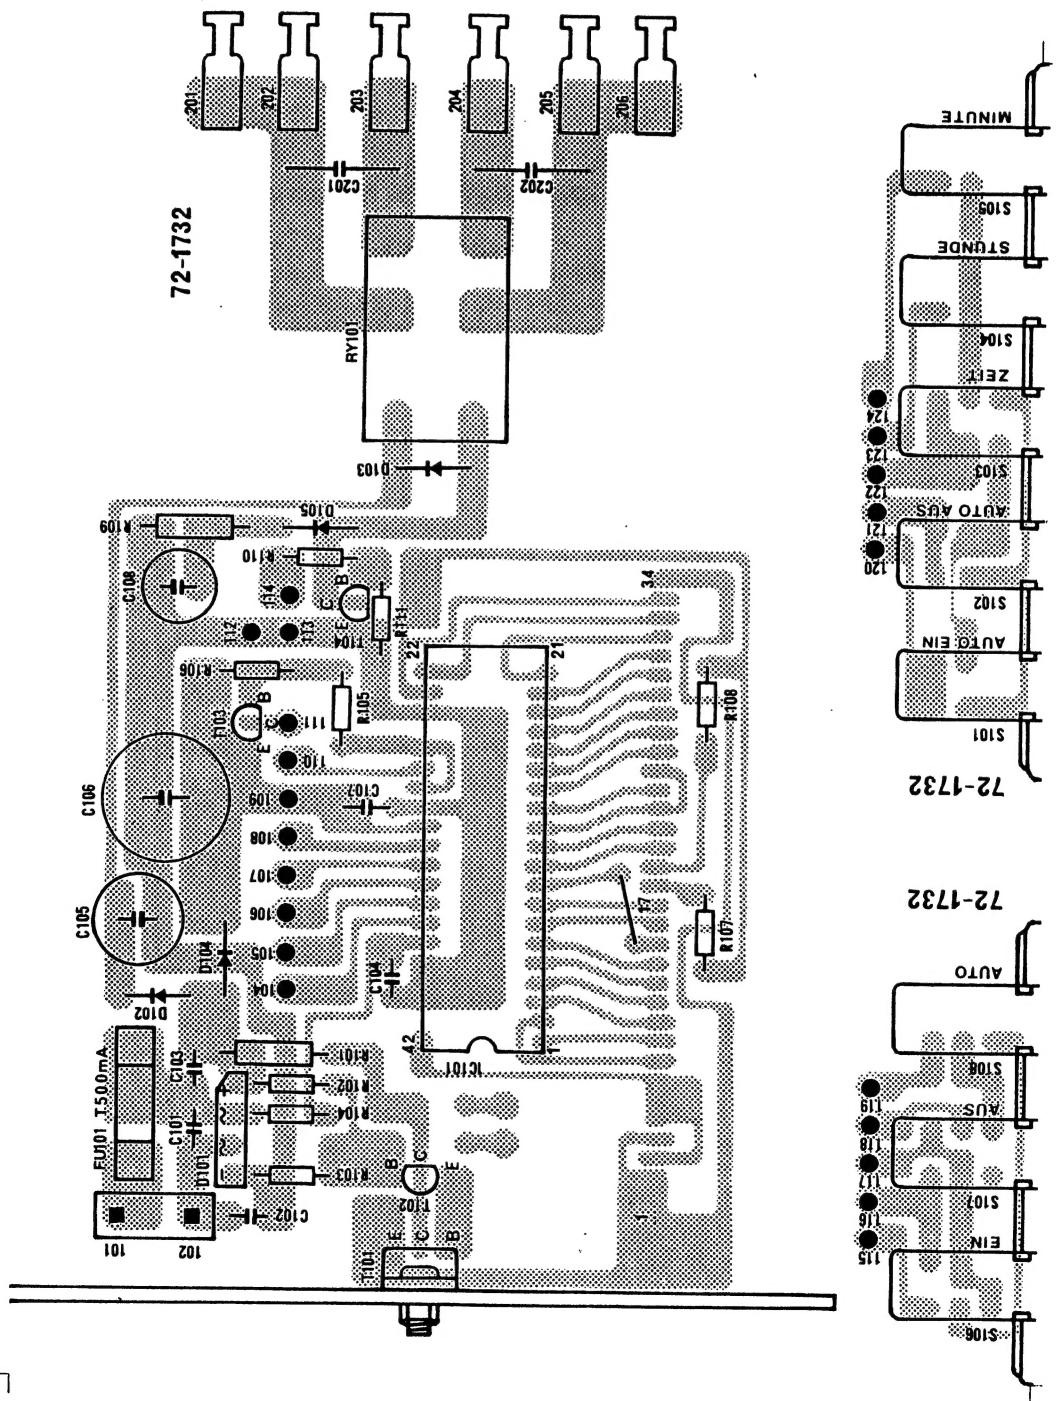


COMPONENT LOCATION – AUDIO CLOCK TIMER UNIT (04-4005)

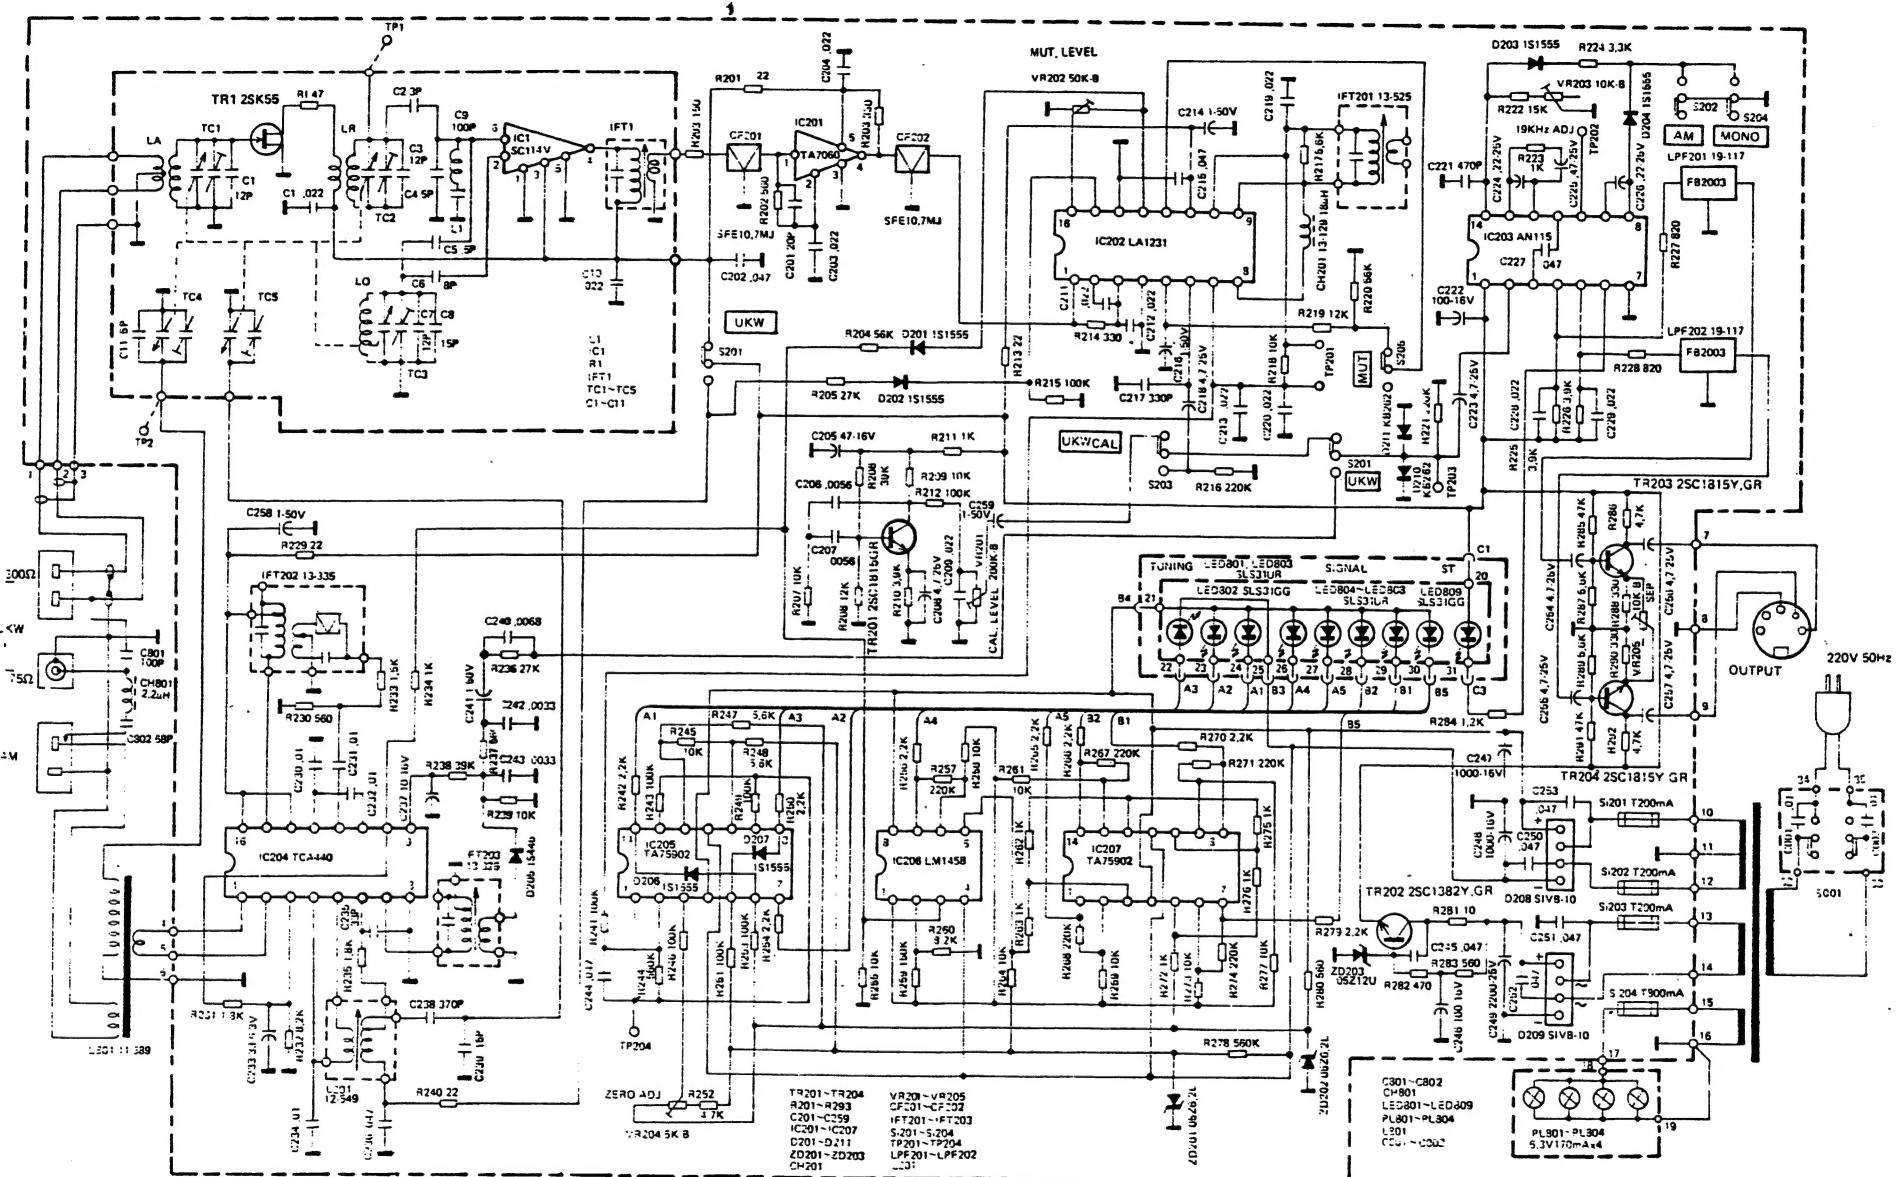

TEC 300T  
01-3300

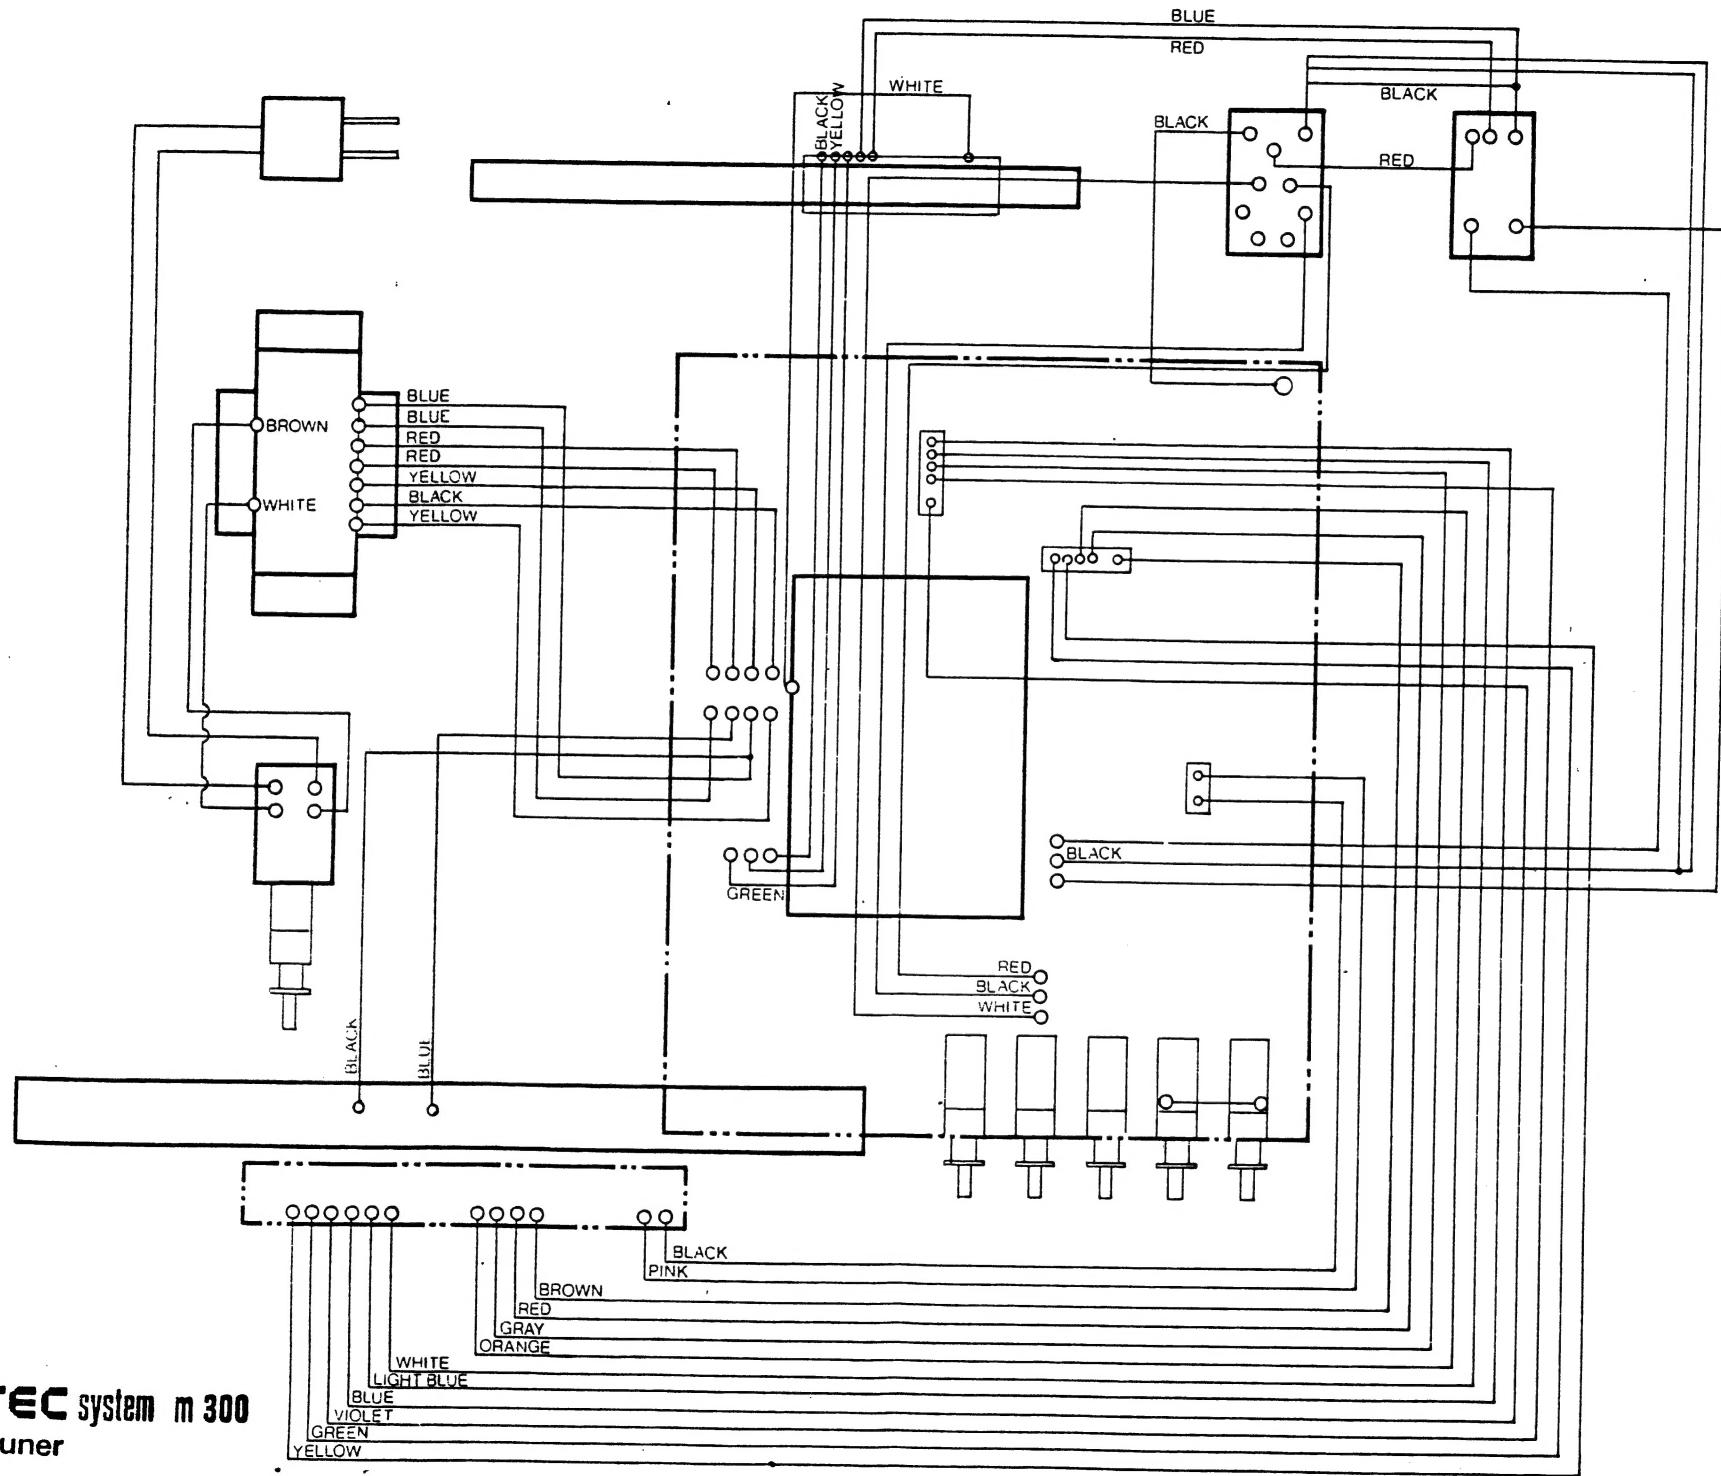

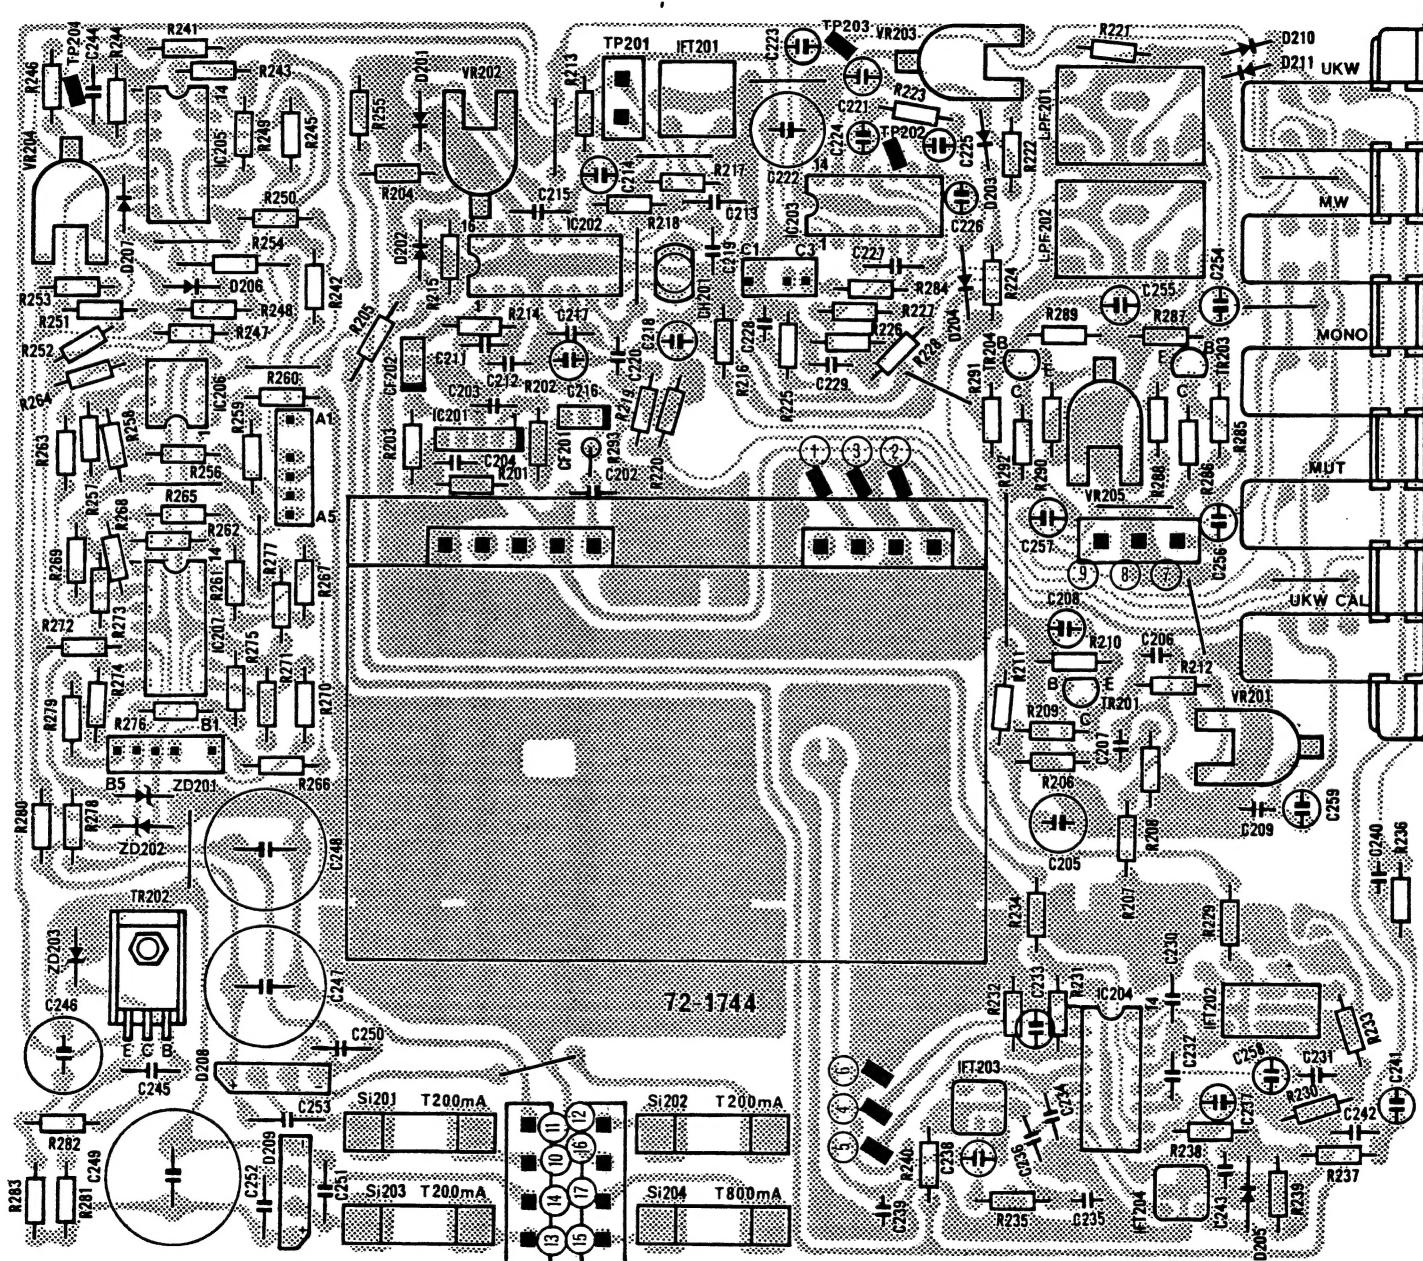

## **COMPONENT LOCATION – TUNER UNIT (01-6039)**